SC9600 series

Vacuum Cleaner

user manual

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

✻ Before operating this unit, please read the instructions carefully.
✻ For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

Code No. DJ68-00621E REV(0.0)

safety information

SAFETY INFORMATION

WARNING
- Before operating the appliance, please read this manual thoroughly and retain it for your reference.

WARNING
- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

WARNING	Indicates that a danger of death or serious injury exists.
CAUTION	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

⃠	Represents something you must NOT do.
★	Represents something you must follow.
(plug)	Indicates that you must disconnect the power plug from the socket.

WARNING This vacuum cleaner is designed for domestic household use only. Do not use this vacuum cleaner to clear building waste or debris. Do not use this vacuum cleaner with any of the filters removed as this could cause damage to the internal components and void your warranty.

safety information

IMPORTANT SAFEGUARDS

1. Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
2. **WARNING** : Do not use the vacuum cleaner when rug or floor is wet.
   Do not use to suck up water.
3. Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
4. Do not use the vacuum cleaner without a dust bin. Empty the dust bin before it is full in order to maintain the best efficiency.
5. Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
6. Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
7. Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before emptying the dust bin. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with the appliance.
10. The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
11. The use of an extension cord is not recommended.
12. If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
13. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
14. Don’t carry the vacuum cleaner by holding the hose.
    Use the handle on the vacuum cleaner set.
15. Unplug the cleaner when not in use. Turn off the power switch before unplugging.

contents

ASSEMBLING THE CLEANER 05

05 Assembling the Cleaner

OPERATING THE CLEANER 06

06 Power cord
06 Power control
07 Body-control type

MAINTAIN TOOLS AND FILTER 08

08 Using accessory
09 Maintain floor tools
11 Emptying the dust bin
12 Cleaning the dust pack
14 Cleaning the outlet filter
14 Change the battery

TROUBLESHOOTING 15

assembling the cleaner

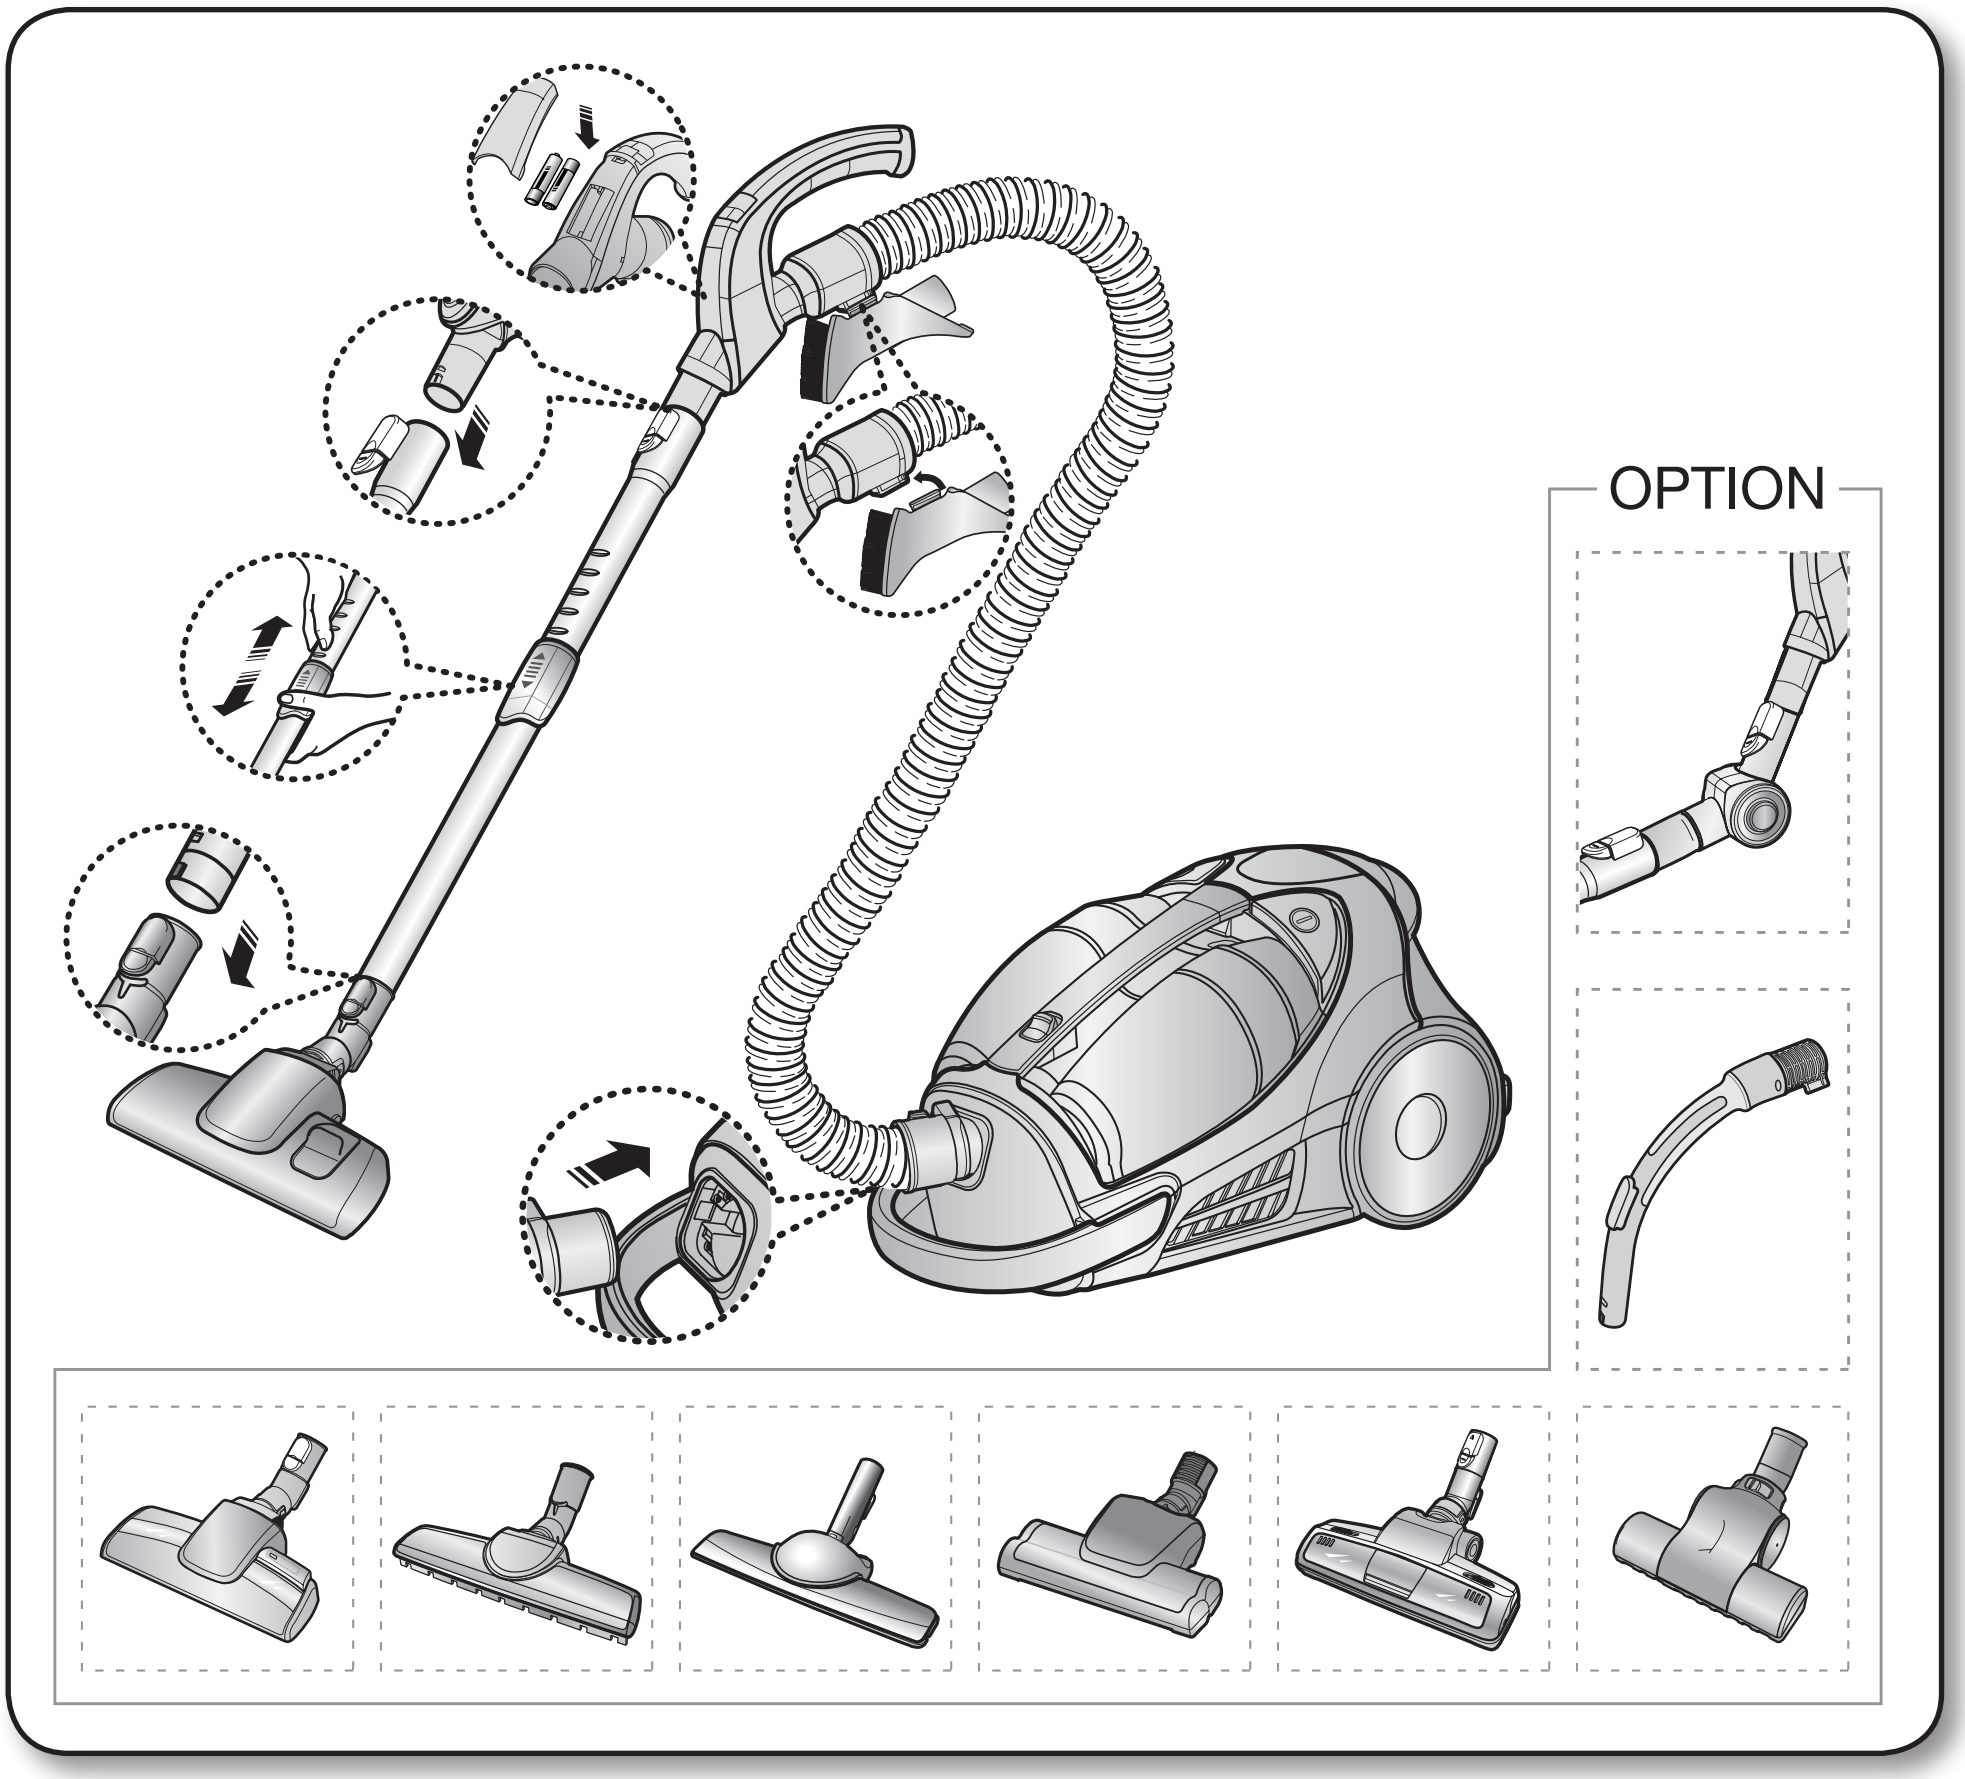

- Please do not press the button of dust bin handle when carrying machine.

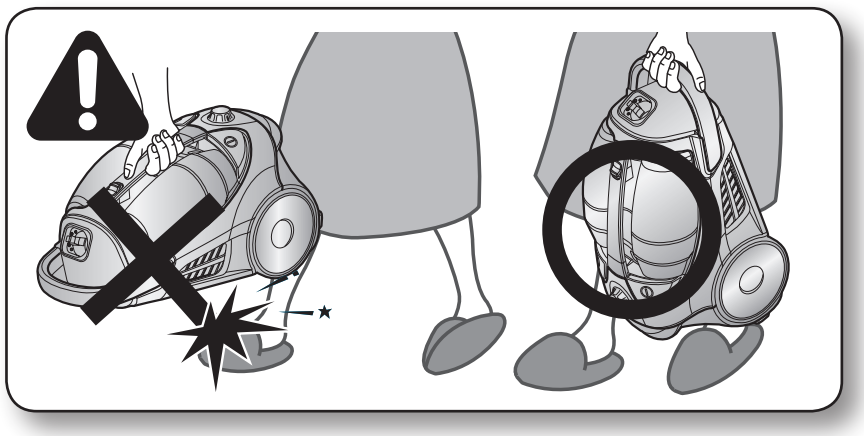

- For storage, park the floor nozzle.

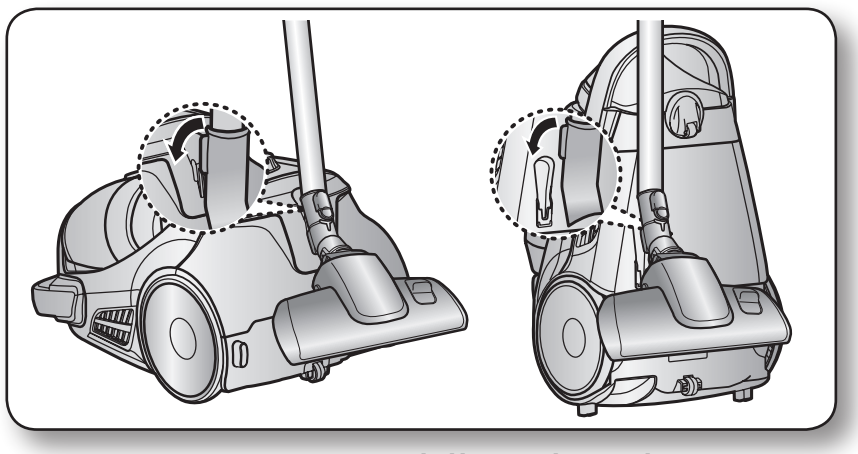

operating the cleaner

POWER CORD

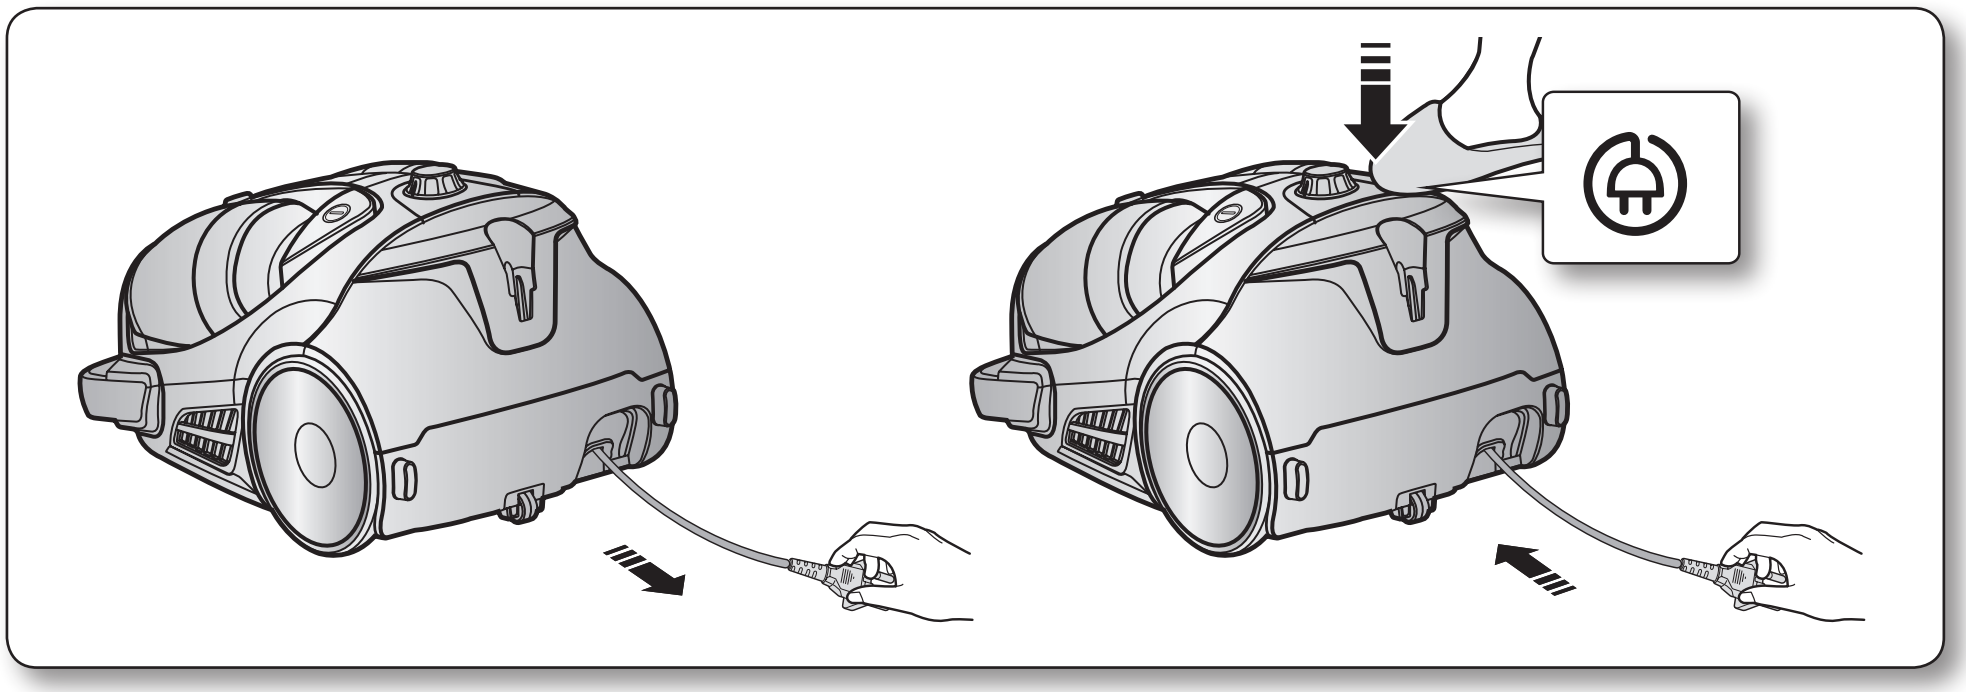

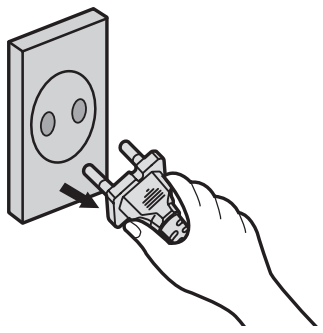

CAUTION

- When removing the plug from the electrical outlet, grasp the plug, not the cord.

POWER CONTROL (INFRARED CONTROL)

- HOSE

1. Vacuum cleaner ON/OFF(⏻)

Press the ON/OFF button to operate the vacuum cleaner. Press again to stop the vacuum cleaner.

2. Vacuum cleaner (-,+)

Press the MODE button repeatedly to select the correct mode.

(ON) MIN → SILENT → MAX

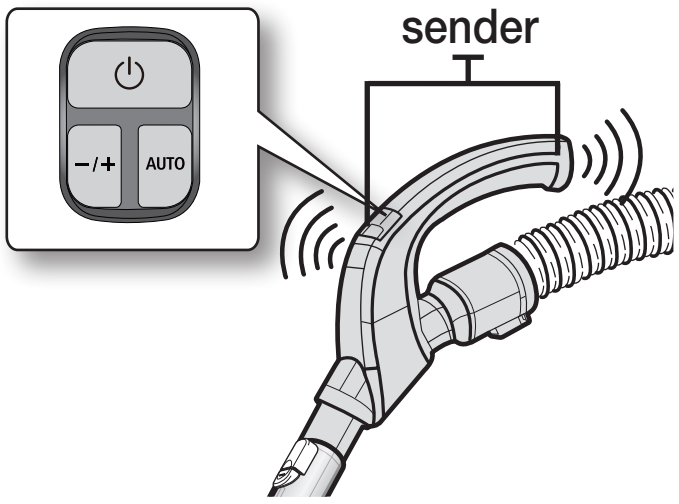

Handle Control
The cleaner is controlled by using infrared signals.

3. Using Auto mode

Press the Auto button to operate the vacuum cleaner automatically.

★ Don't cover the handle sender when you use a handle control button.

- BODY

Press the power ON/OFF button repeatedly to start and to stop the vacuum cleaner.
(OFF → ON → OFF)

★ If the remote handle control is not working, the cleaner can be operated using the ON/OFF button on the body of the machine.

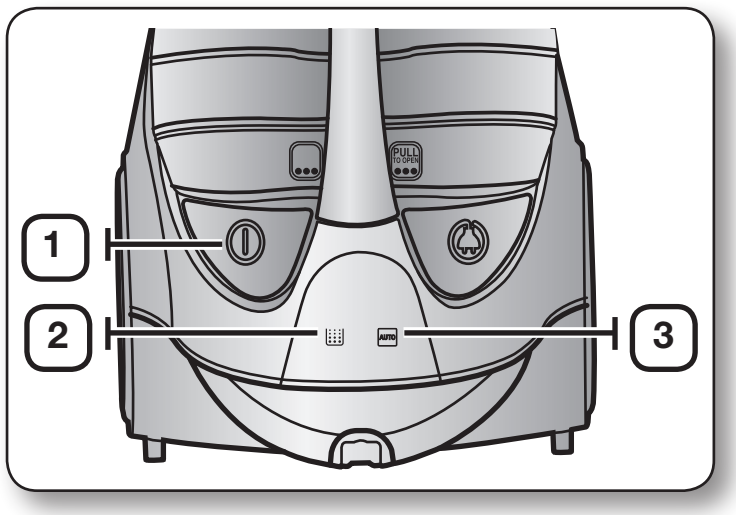

1	The ON/OFF button operates the vacuum cleanner or stops it.
2	The filter light is illuminated when the dust pack requires checking or emptying. An audio signal will also sound.
3 AUTO	This indicates that the automatic suction mode is selected. The level of suction is indicated by the LED display.

BODY-CONTROL TYPE

- HOSE

To reduce suction for cleaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open.

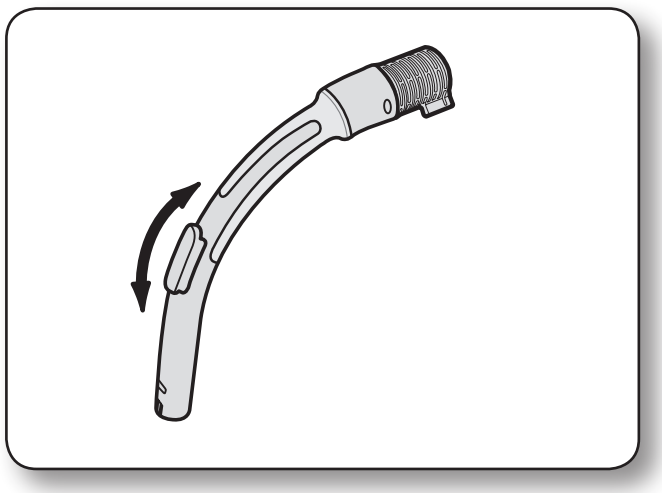

- BODY

Press the power ON/OFF button repeatedly to start and stop the vacuum cleaner.

(OFF → ON → OFF)

To control power level, just slide the power control button right and left.

MIN = For delicate surface e.g. net curtains.

MAX = For hard floors and heavily soiled carpets.

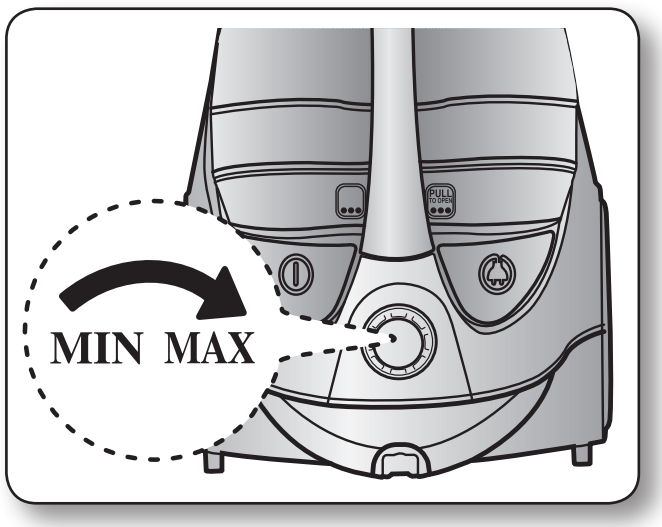

	The filter light is illuminated when the dust pack requires checking or emptying. An audio signal will also sound.

USING ACCESSORY

ACCESSORY

- Push the accessory on to the end of the hose handle.

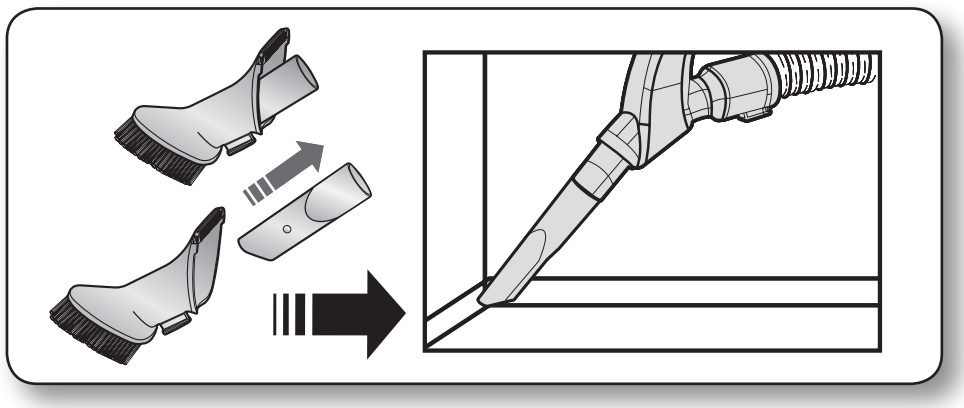

- To use the dusting tool, push the accessory on to the end of the hose handle.

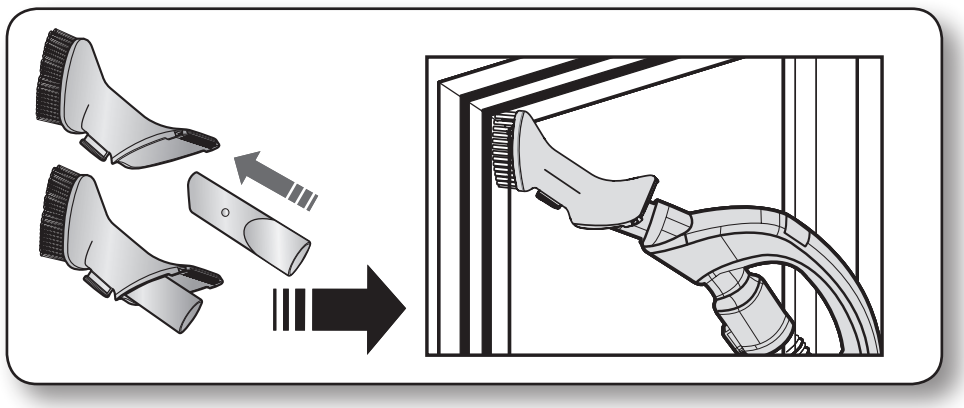

- To use the upholstery tool, push the accessory on to the end of the hose handle.

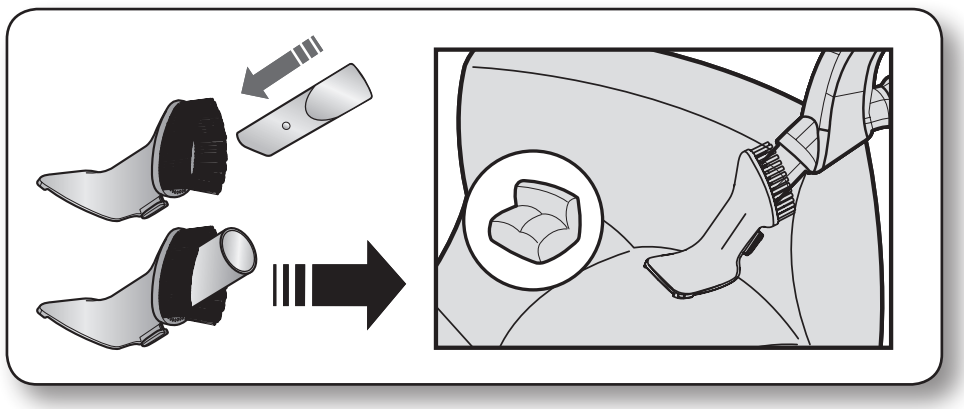

PIPE

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

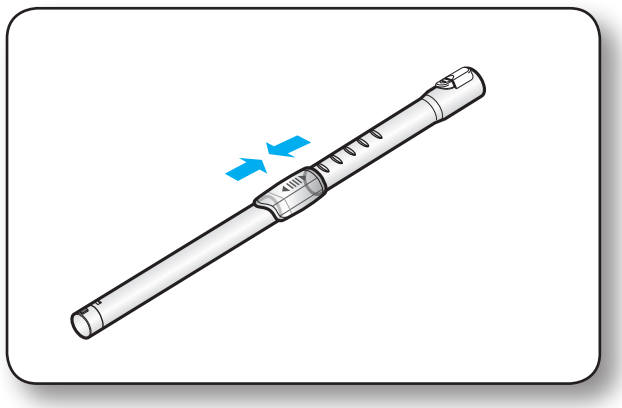

- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

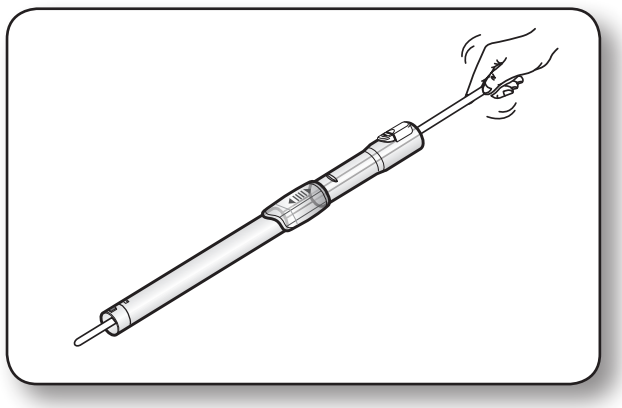

maintain tools and filter

MAINTAIN FLOOR TOOLS

ELBOW EXTENDING TUBE (OPTION)

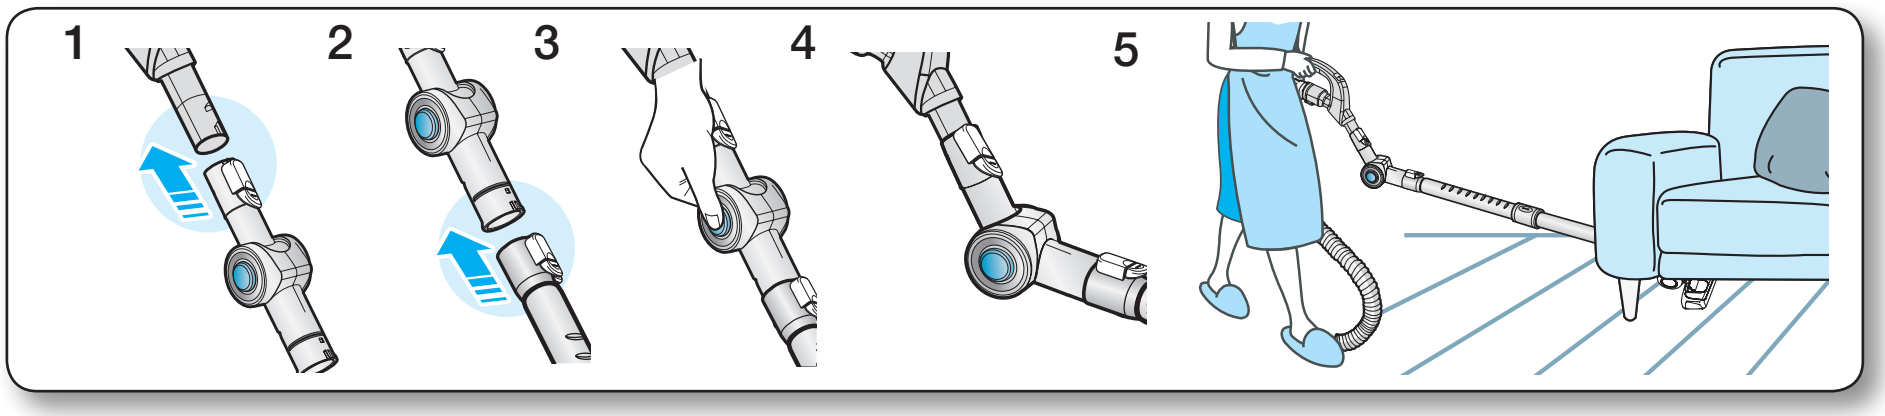

1. Connect the elbow extending tube to connecting part for hose knob and telescopic pipe.
2. Fit the telescopic pipe to the lower part of the elbow extending tube.
3. Press the PUSH button.
4. With the PUSH button pressed, the elbow extending tube is folded.
5. Using the elbow extending tube allows hard to reach areas (e.g. under furniture)to be cleaned without having to kneel down.

3 Way Brush (Option)

- Adjust the inlet lever according to the floor surface.
- Remove waste matter completely if the inlet is blocked.

2-Step Brush (Option)

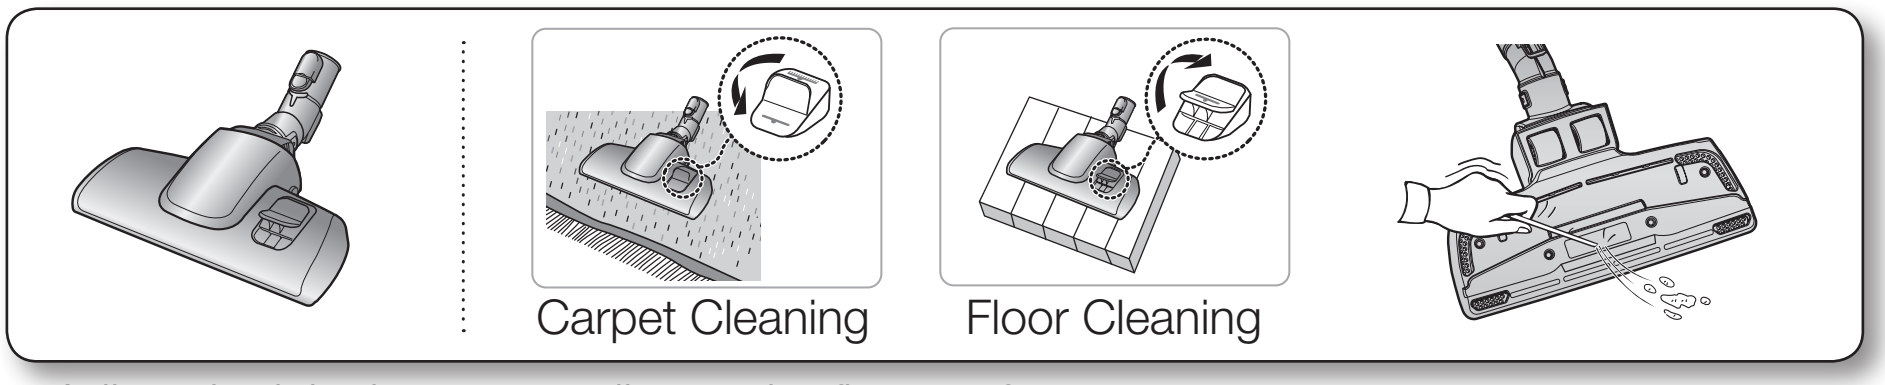

- Adjust the inlet lever according to the floor surface.
- Remove waste matter completely if the inlet is blocked.

Parquet Master Brush (Option)

- Vacuum dust in wide area at once.
- Remove waste matter completely if the inlet is blocked.

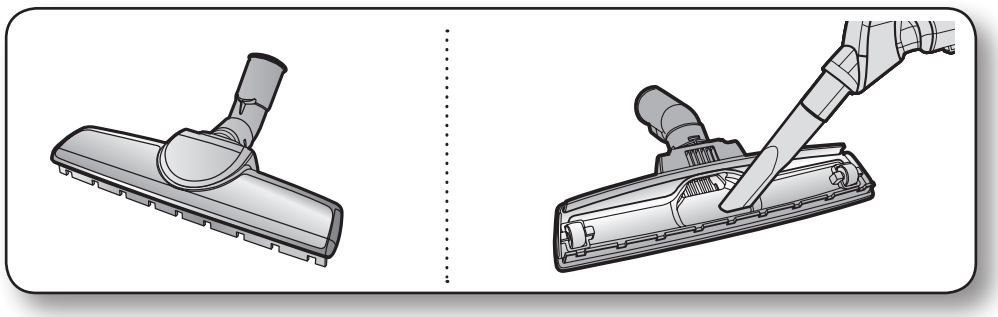

maintain tools and filter

Parquet Brush (Option)

- Vacuum dust in wide area at once.
- Remove waste matter completely if the inlet is blocked.

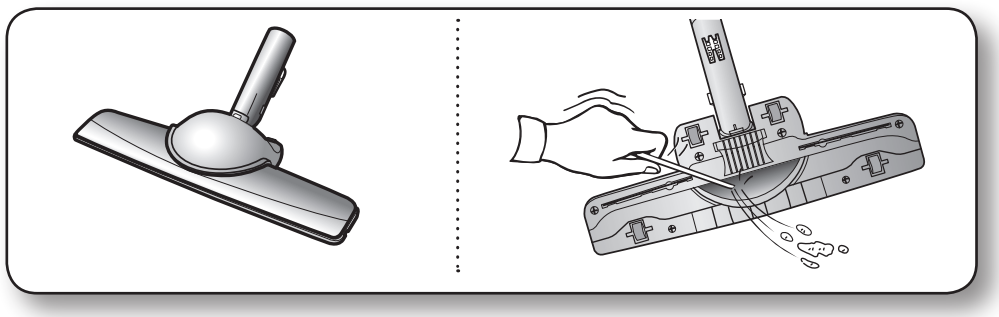

Blanket Brush(Option)



For picking up pet hair and fibre on upholstery and bed linen.

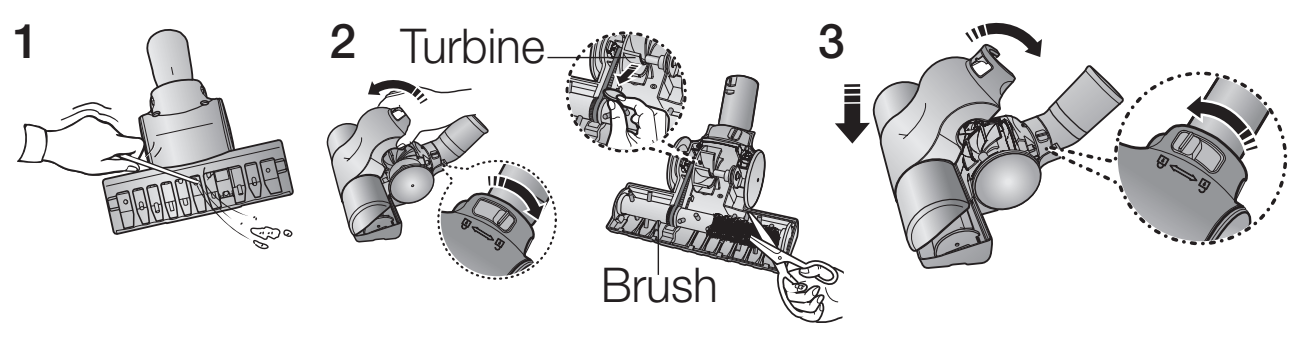

1. Remove waste matter completely when inlet is blocked.
2. Turn the lock button to ( ), and remove.
3. To reassemble, align the cover to the front of the main body and close. After closing the cover, ensure that the lock button is turned to the ( ) position.

CAUTION Use for bedclothes only. Be cautious not to damage brush during unclogging.

Super turbine brush (Option)

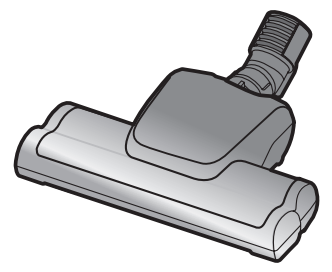

For improved pickup of pet hair and fibre on carpets.

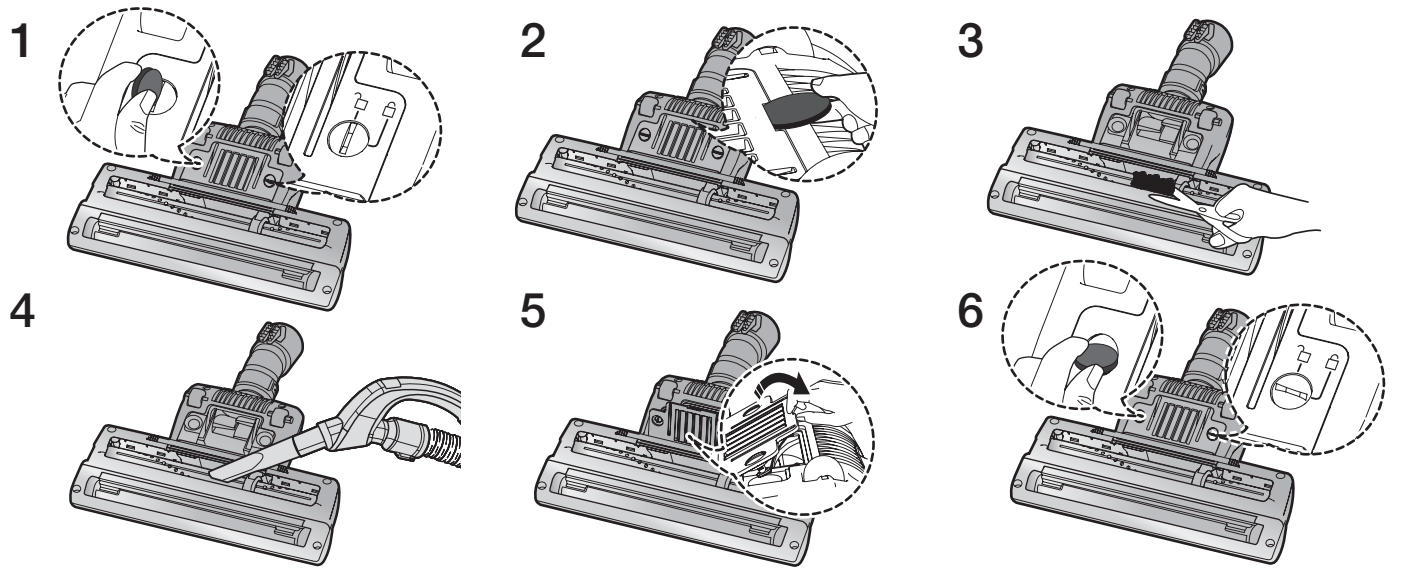

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Turn the lock button to unlock position ( ) using a coin or a similar object.
2. Remove the guide air use the like coin.
3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.
4. Remove dust inside the brush housing using a dry duster or crevice tool.
5. Assemble the guide air.
6. Turn the lock button to lock position ( ) using a coin or a similar object.

CAUTION Please be careful not to damage the brush.

Power Pet Plus Brush (Option)

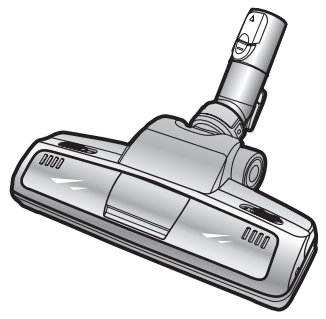

For improved pickup of pet hair and fibre on carpets.

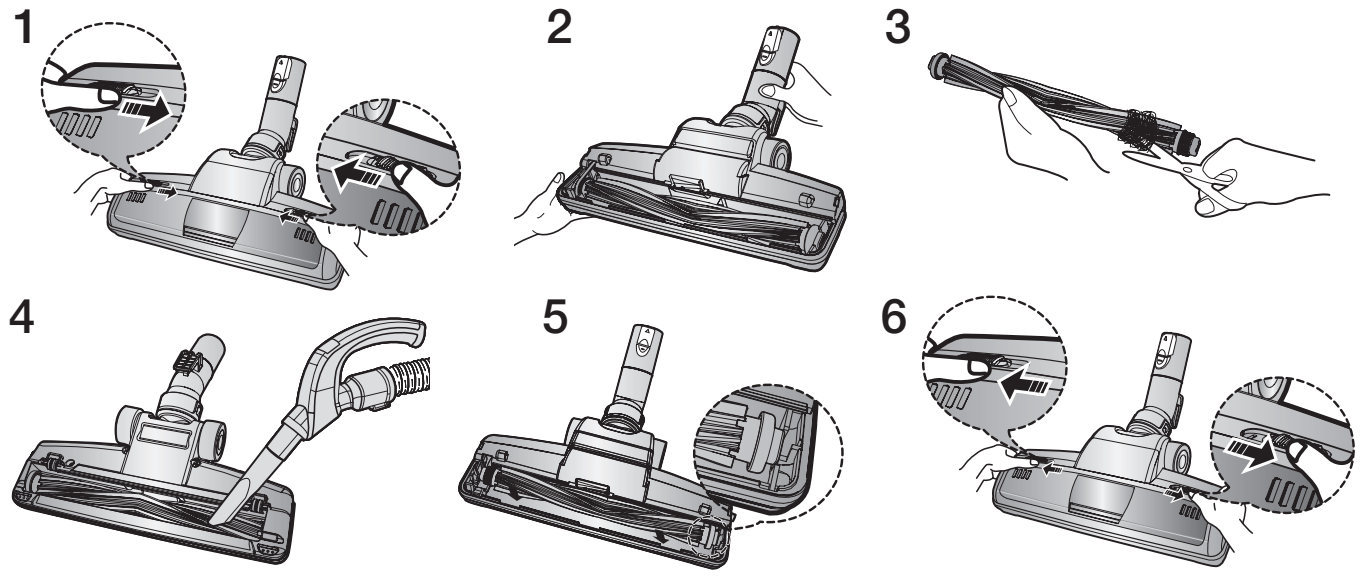

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Push the Open button of the transparent screen cover to separate the cover.
2. Remove the brushbar from the transparent screen.
3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.
4. Remove dust inside the brush housing using a dry duster or crevice tool.
5. Insert brushbar into rotating belt and assemble.
6. Click the transparent screen cover back into place to reassemble.

EMPTYING THE DUST BIN

1	2	3
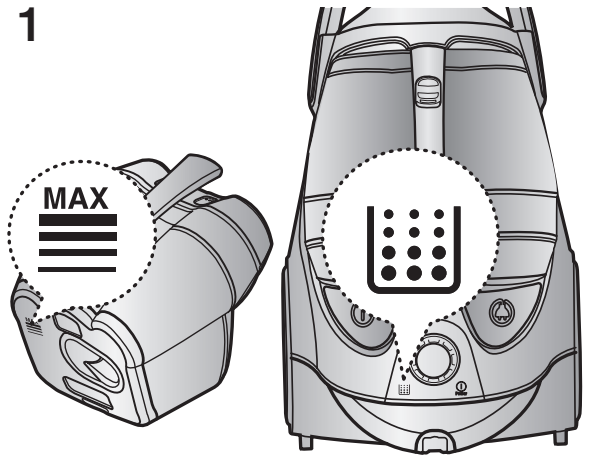	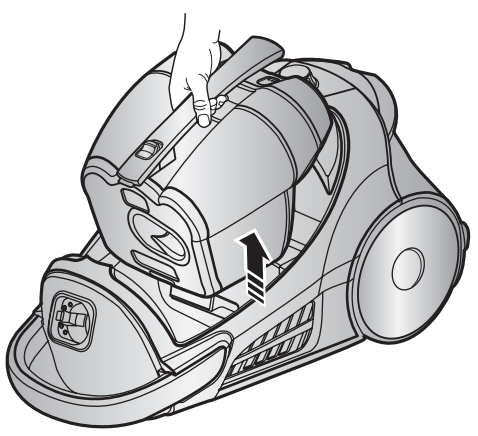	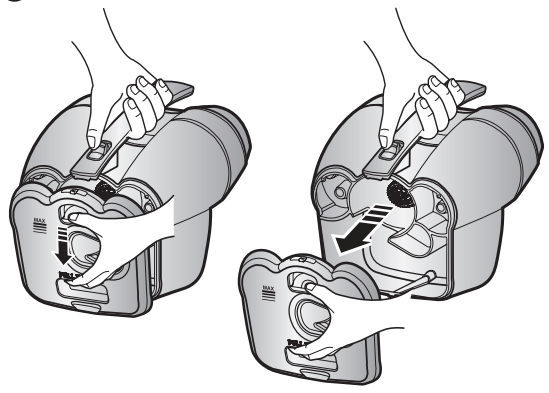
Once dust reaches the dust full mark, empty the dust bin.	Take the dust bin out by pulling the button.	Open the dust bin cover
4	**5**	**6**
	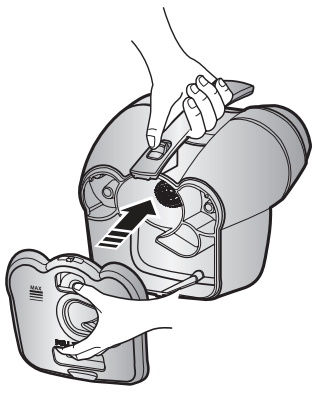	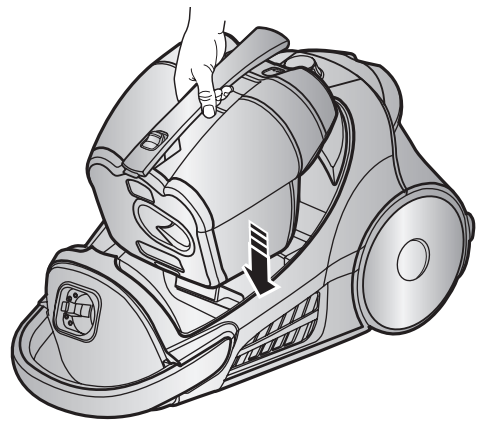
Throw the dust away in the bin.	After emptying the dust bin, remove the obstacles like hair, fur on the cap of the dust bin. And close the dust bin cover.	Before use, push the dust bin into the main body and press the cover dust of the vacuum cleaner until you hear the “click” sound.

maintain tools and filter

- Empty into a plastic bag.
  (recommended for asthma/allergy sufferers)

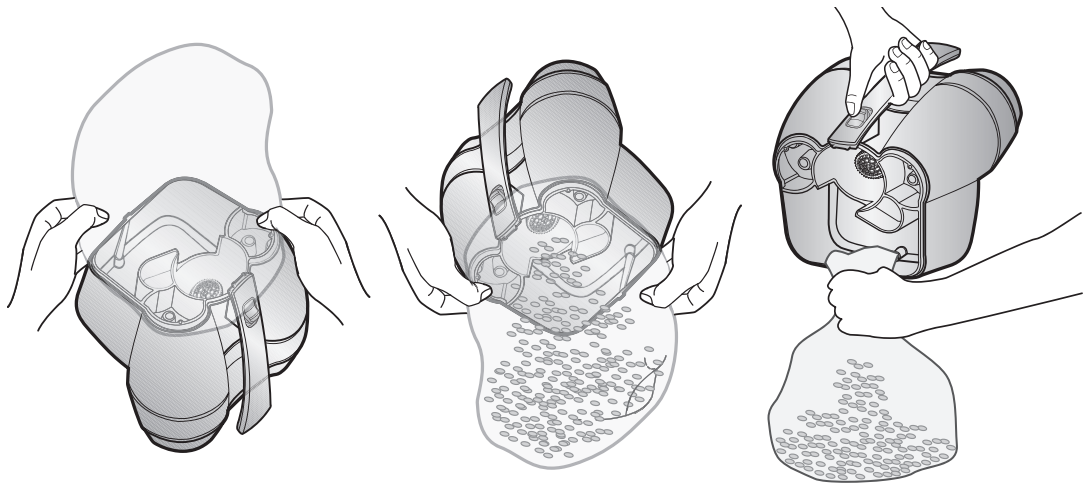

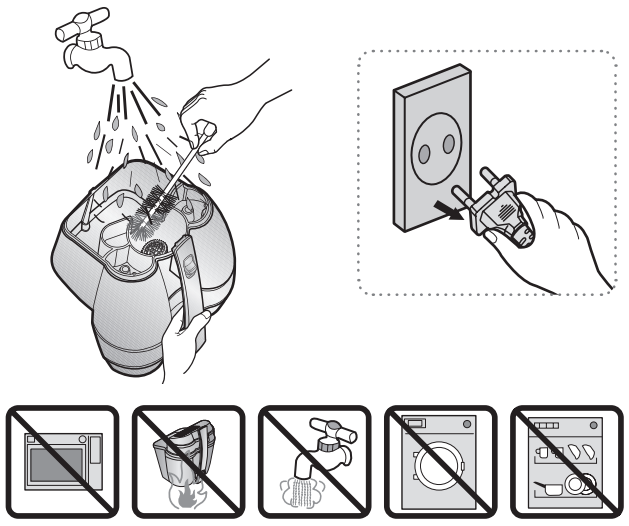

You may rinse the dust bin with cold water.

Option

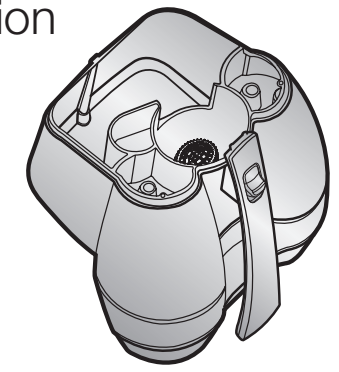

When emptying any vacuum cleaner it is difficult to avoid exposure to dust. To minimize this risk, Please ensure that you encase the dust pot in a large bag to empty it and close the bag as tightly as possible round the pot. Remove the pot and close the bag as tightly and quickly as possible and dispose of this immediately. it is advisable to wear disposable gloves and a face mask while emptying the cleaner. If at all possible, ask a non allergy sufferer to empty the dust pot when required.

CLEANING THE DUST PACK

WHEN TO CLEAN THE DUST PACK

- The lamp will turn red when suction is reduced. If the light comes on, please clean the dust pack.

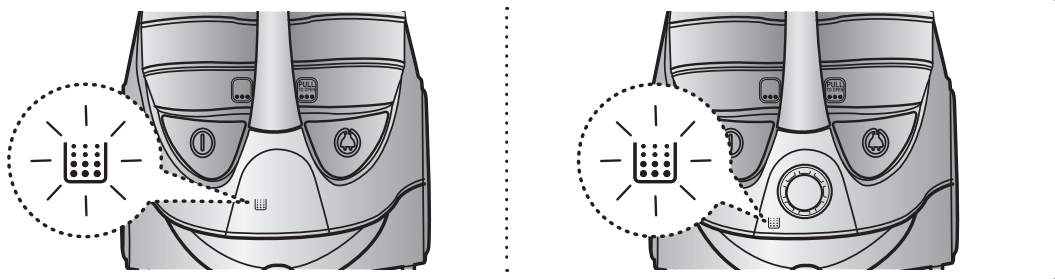

- Turn the vacuum power to ‘MAX’.

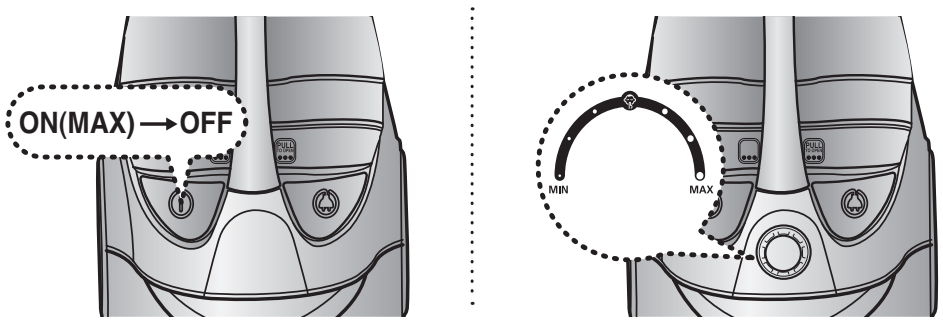

Body Control

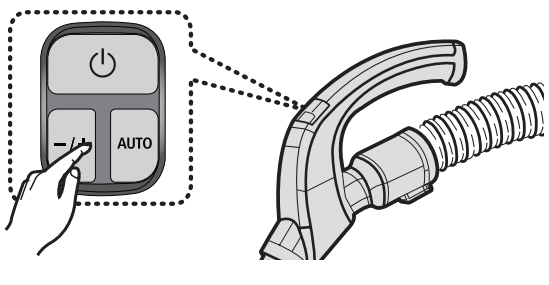

Handle Control

- If the filter check indicator turns red with the inlet floating 10cm above flat floor, clean the dust pack.

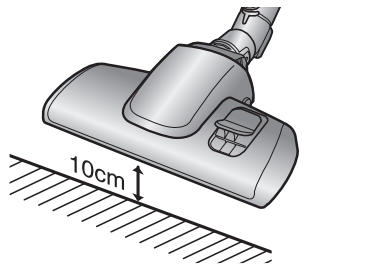

When suction is noticeably reduced continuously, please cleaning the dust pack.

CLEANING THE DUST PACK

1
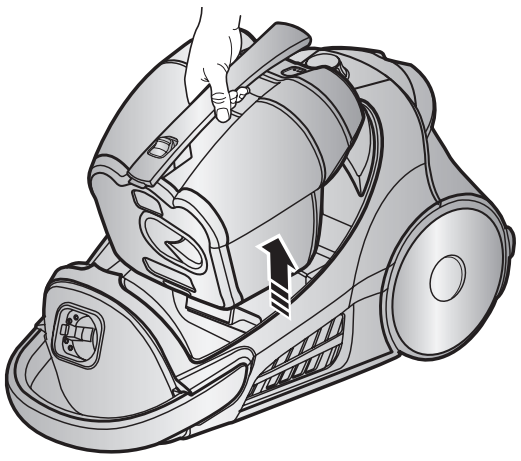
Take the dust bin out.

2
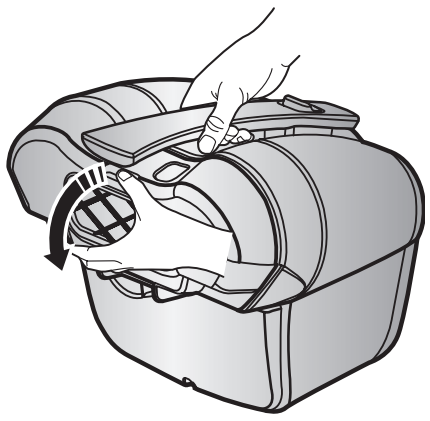
Pull the dust pack cover to open.

3
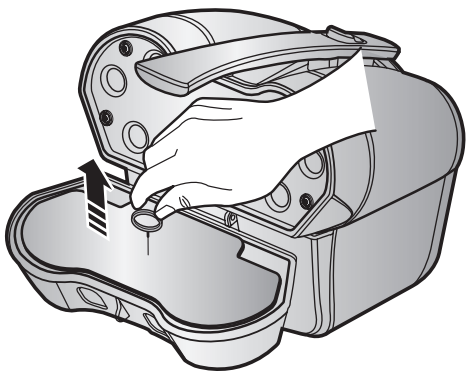
Remove the sponge and filter from the dust pack.

4
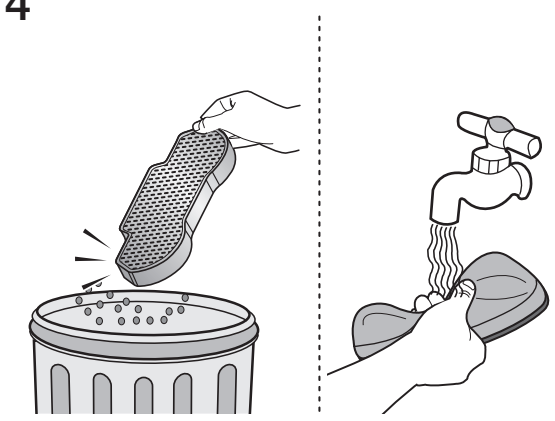
Wash the sponge and the filter of the dust pack with water.

5
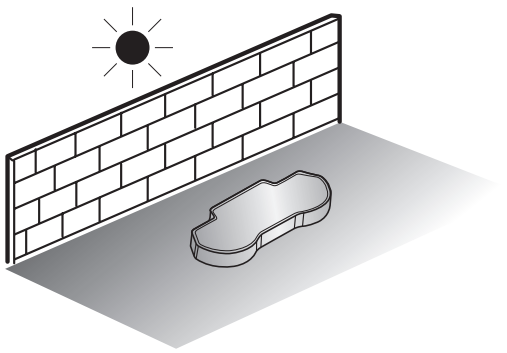
Let the sponge and filter dry in the shade for more than 12 hours.

6
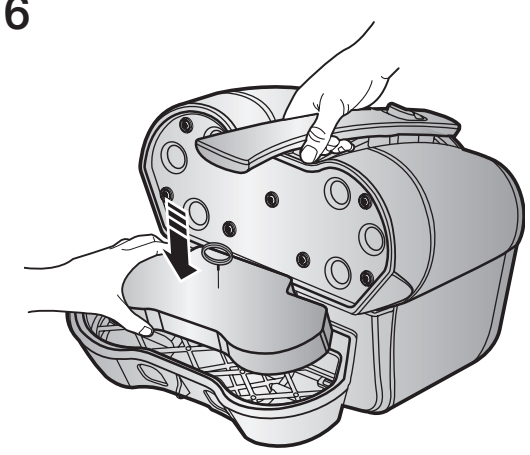
Put the sponge and filter into the dust pack.

7
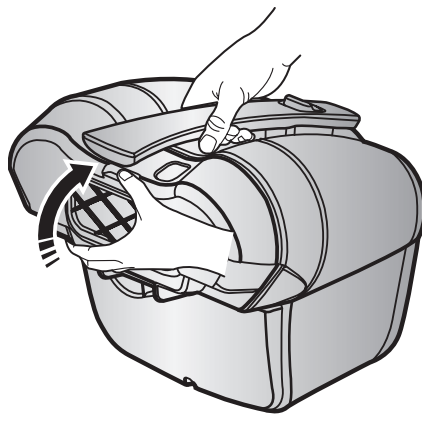
Close the dust bin cover.

8
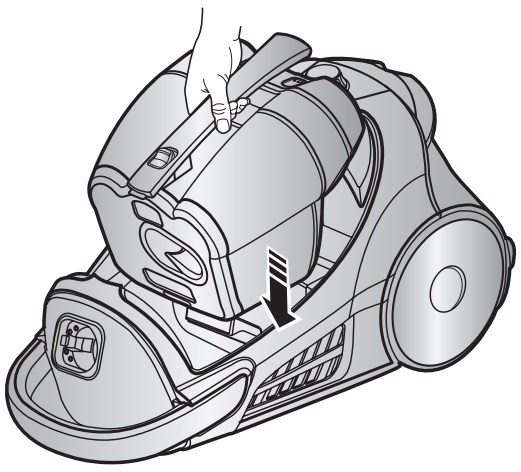
Before use, push the dust bin into the main body of the vacuum cleaner until you hear the “click” sound.

★ Make sure the filter is completely dry before putting it back into the vacuum cleaner. Allow 12 hours for it to dry.

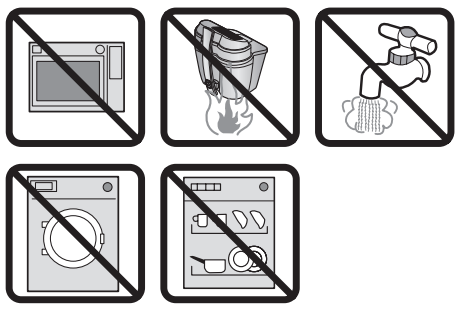

maintain tools and filter

CLEANING THE OUTLET FILTER

1

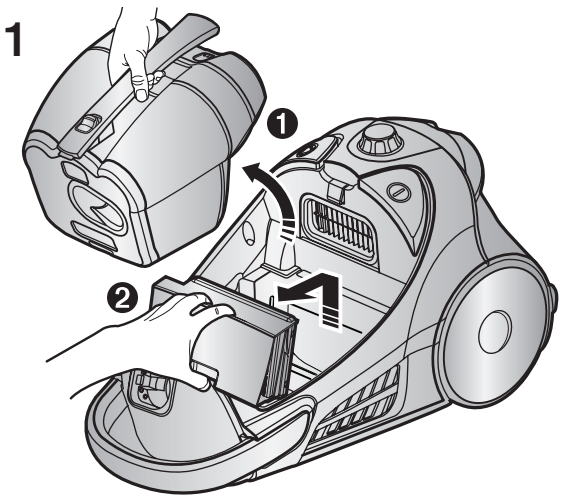

Remove the dust bin and HEPA Filter as shown.

2

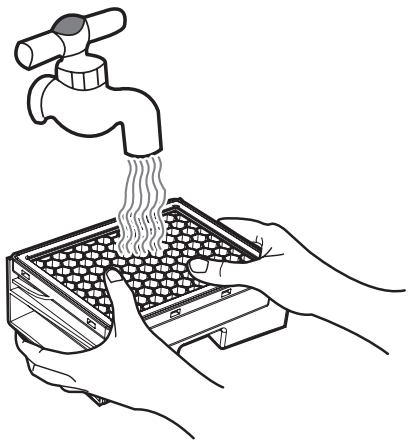

Clean the HEPA Filter.

3

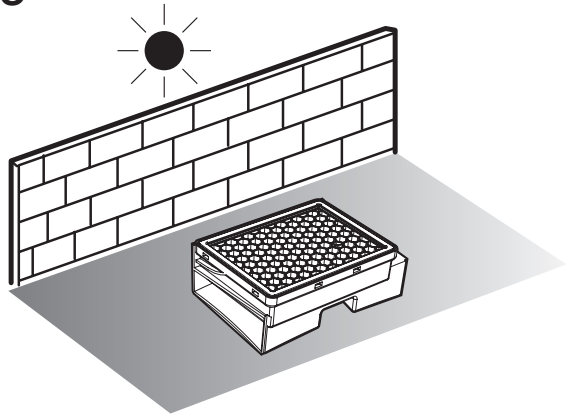

Let the HEPA Filter dry in the shade for more than12 hours.

4

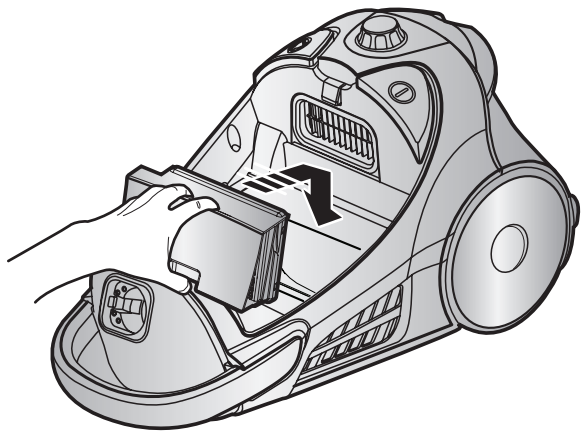

Put assemble HEPA Filter into the main body.

Make sure the filter is completely dry before putting it back into the vacuum cleaner. Allow 12 hours for it to dry.

CHANGE THE BATTERY (OPTION)

1. When the vacuum cleaner does not work, replace the batteries. If the problem persists, please contact our authorized dealer.
2. Use 2 batteries of size AAA.

CAUTION

1. Never disassemble or recharge the batteries.
2. Never heat up the batteries or throw them into fire.
3. Do not reverse (+), (-) poles.
4. Dispose of the batteries property.

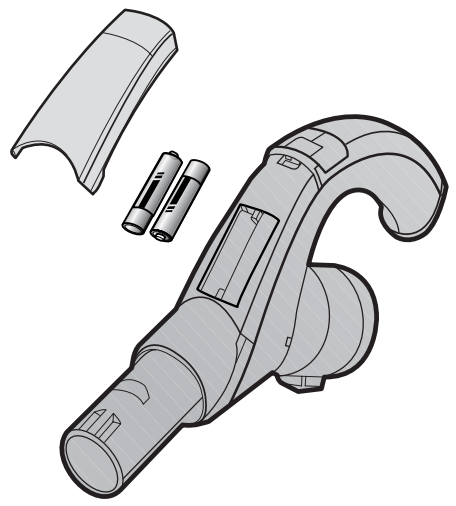

BATTERY TYPE : AAA Size

troubleshooting

PROBLEM	SOLUTION
Motor does not start	• Check cable, pulg and socket. • Leave to cool.
Suction force is gradually decreasing	• Check for blockage and remove.
Cord does not rewind fully	• Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner does not pick up dirt	• Check hose and replace if required.
Low or decreasing suction	• Please check filter and, if required, clean as illustrated in the instructions. if filters are out of condition change them to new ones.
Body overheating	• Please check filters, If required clean as illustrated in the instruction.
Static electicity discharge	• Please decrease power suction.

SAMSUNG

لأي أسئله لها علاقه بمنتجات سَامْسُونْج يُرجى الإتصال بمركز خدمة عملاء شركة سَامْسُونْج

Web Site	Customer Care Center ☎	Country
www.samsung.com	800-SAMSUNG(726-7864)	U.A.E
www.samsung.com	8000-4726	BAHRAIN

استكشاف الأخطاء وإصلاحها

المشكلة	الحل
المحرك لا يعمل	• افحص كل من الكبل والقابس والمقبس. • اتركه حتى يبرد.
قوة الشفط تقل تدريجيًا	• افحصه للتأكد من وجود انسداد وقم بإزالته.
لا يلتف السلك بشكل كامل	• اسحب السلك للخارج بمسافة مترين إلى ٣ أمتار وادفع زر إدخال السلك لأسفل.
المكنسة الكهربائية لا تلتقط الأتربة	• افحص الخرطوم واستبدله إذا لزم الأمر.
تناقص قوة الشفط أو انخفاضها	• يُرجى فحص المرشح وإذا لزم الأمر قم بتنظيفه كما هو موضح بالإرشادات. وإذا لم تكن المرشحات بحالة جيدة، فاستبدلها بأخرى جديدة.
حدوث سخونة زائدة في جسم المكنسة	• الرجاء فحص المرشحات، وقم بتنظيفها إذا لزم الأمر كما هو موضح في الإرشادات.
تفريغ شحنات كهربية استاتيكية	• الرجاء خفض قوة الشفط.

صيانة الأدوات والمرشح

تنظيف مخرج المرشح

١

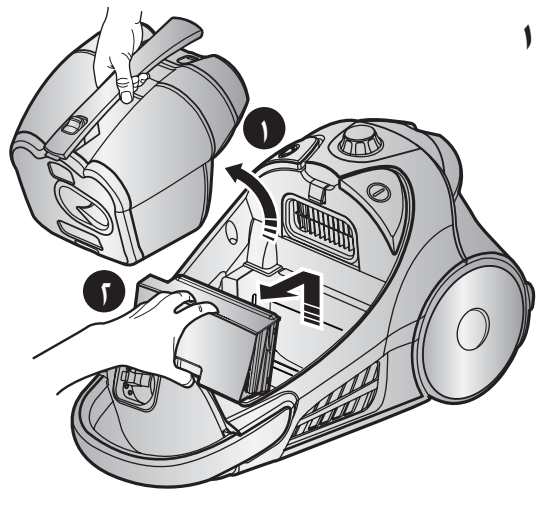

قم بإخراج حاوية الأتربة ومرشح HEPA كما هو موضح.

٢

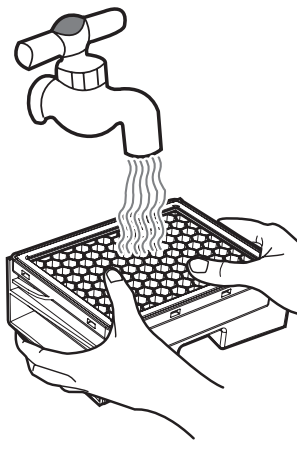

تنظيف المرشح HEPA.

٣

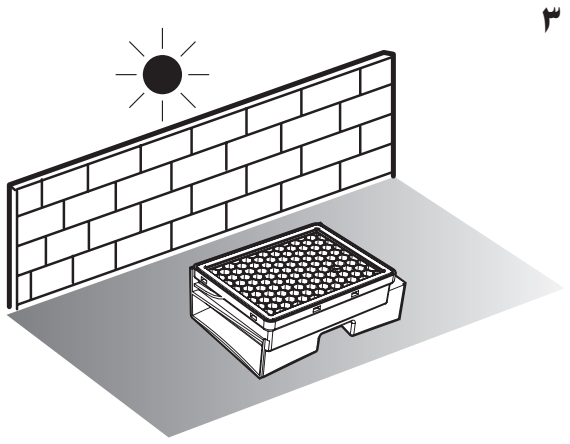

اترك المرشح HEPA في مكانٍ ظليلٍ لأكثر من ١٢ ساعة حتى يجف.

٤

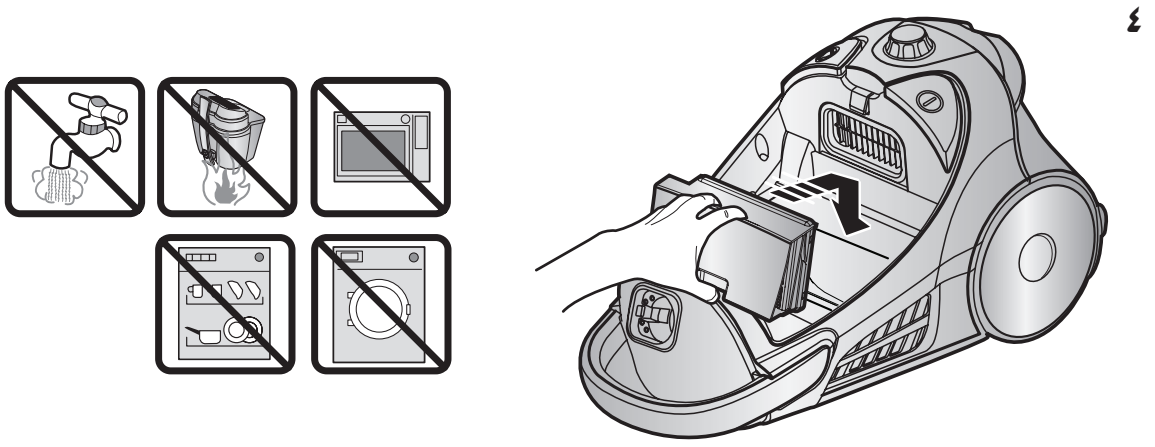

ضع المرشح HEPA داخل الجسم الرئيسي.

تأكد من تجفيف المرشح تمامًا قبل إعادته مرة أخرى داخل المكنسة الكهربائية. اتركه لمدة ١٢ ساعة حتى يجف.

تغيير البطارية (اختياري)

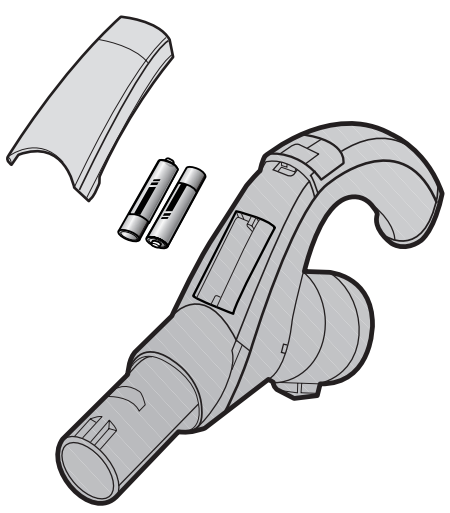

نوع البطارية : حجم AAA

١. استبدل البطاريات فى حال توقف المكنسة الكهربية عن العمل. وفي حالة استمرار المشكلة، الرجاء الاتصال بوكيلنا المعتمد.

٢. استخدم بطاريتان بحجم AAA.

تنبيه

١. لا تقم مطلقًا بفك البطاريات أو إعادة شحنها.

٢. لا تقم مطلقًا بتسخين البطاريات أو إلقائها في النار.

٣. لا تعكس القطبين (+) و(-).

٤. تخلص من البطاريات بشكل سليم.

تنظيف حاوية الأتربة

١

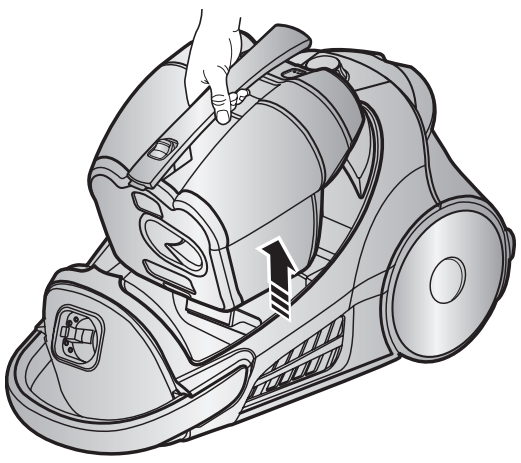

قم بإخراج حاوية الأتربة.

٢

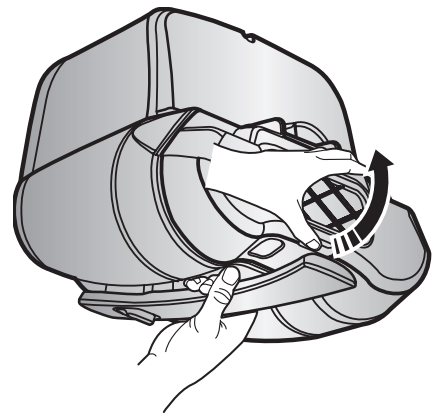

اجذب غطاء حاوية الأتربة لفتحها.

٣

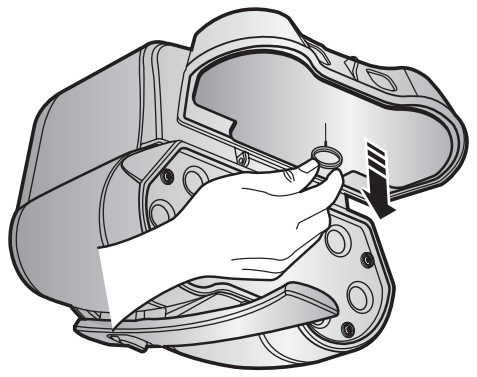

قم بإخراج الإسفنجة والمرشح من حاوية الأتربة.

٤

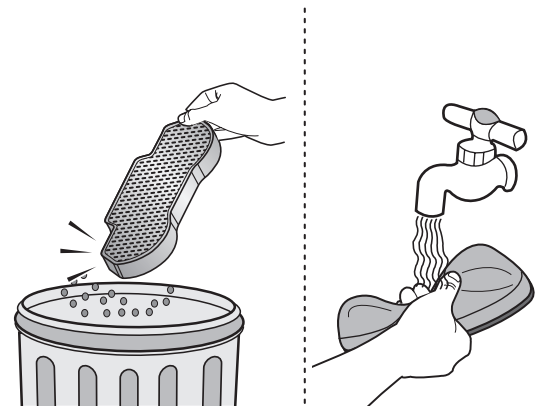

قم بغسل الإسفنجة والمرشح لحاوية الأتربة بالمياه.

٥

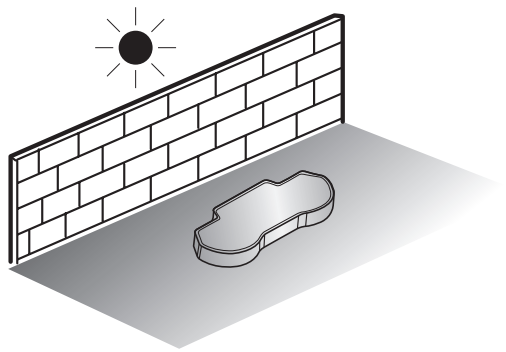

اترك الإسفنجة والمرشح في الظل لأكثر من ١٢ ساعة حتى تجف.

٦

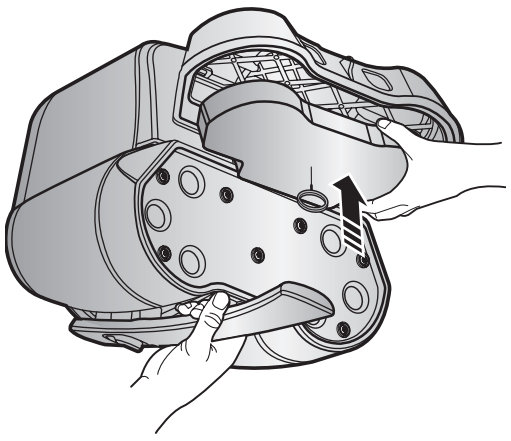

ضع الإسفنجة والمرشح داخل حاوية الأتربة.

٧

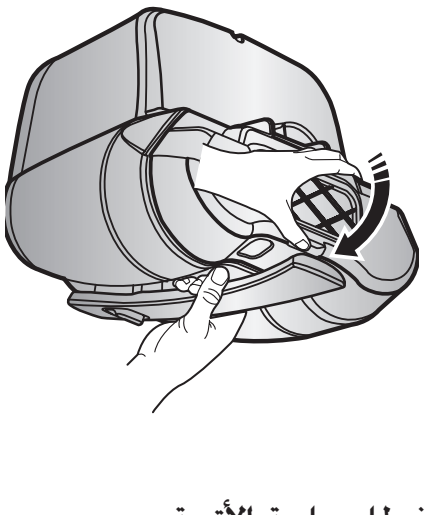

أغلق غطاء حاوية الأتربة.

٨

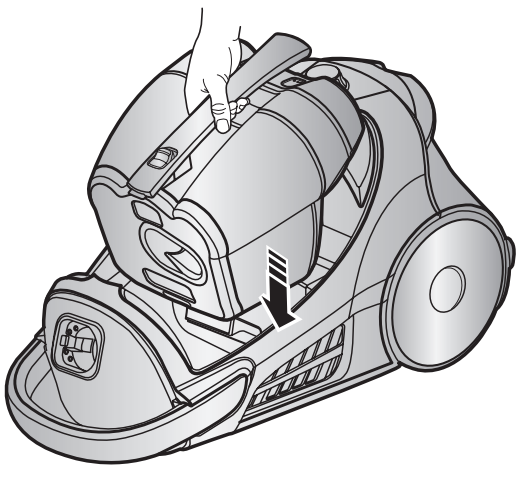

قبل الاستخدام، ادفع حاوية الأتربة إلى داخل الجسم الرئيسي للمكنسة الكهربائية حتى تسمع صوت "قرقعة".

★ تأكد من تجفيف المرشح تمامًا قبل إعادته مرة أخرى داخل المكنسة الكهربائية. اتركه لمدة ١٢ ساعة حتى يجف.

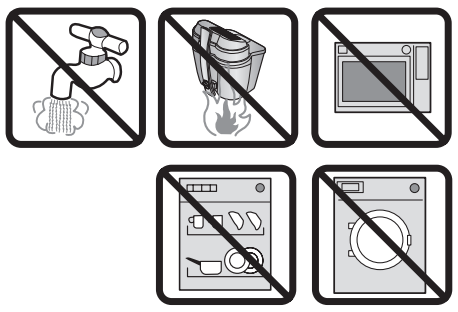

صيانة الأدوات والمرشح

- قم بالتفريغ في كيس بلاستيكي.
(هذا إجراء مستحسَن لمن يعانون من أمراض الربو/الحساسية)

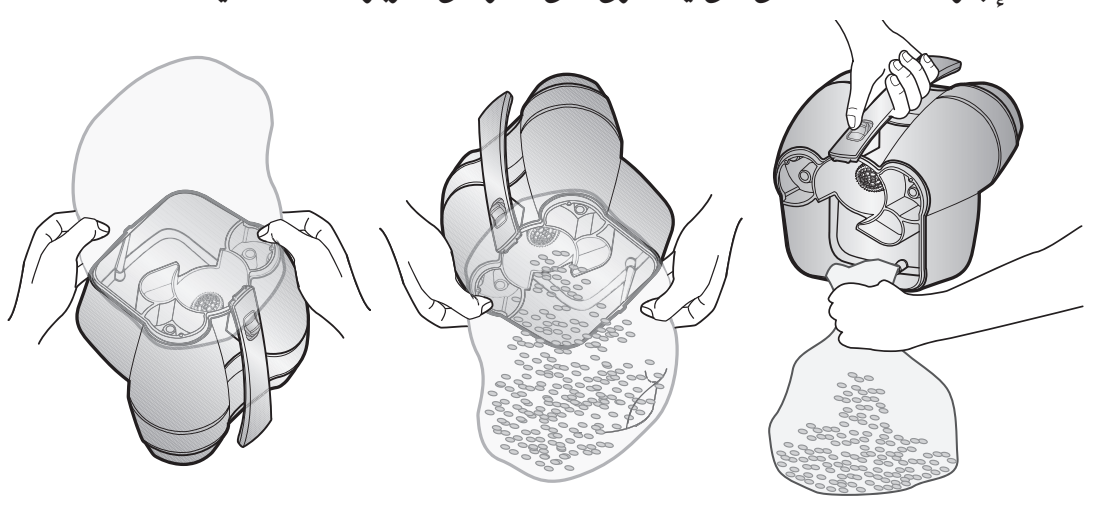

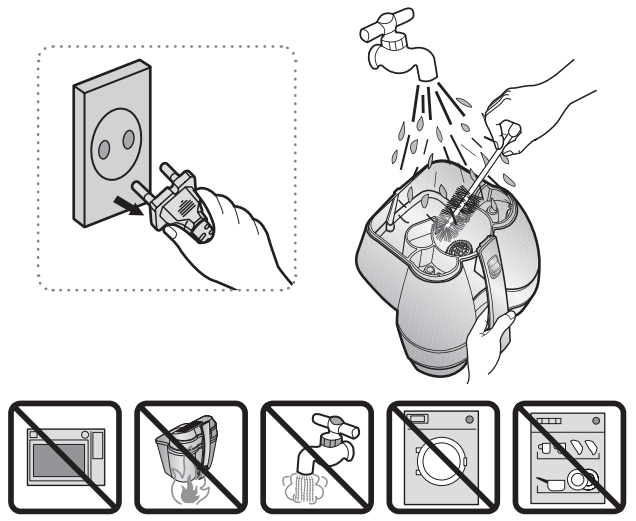

★ يمكنك تنظيف حاوية الأتربة بالماء البارد.

اختياري

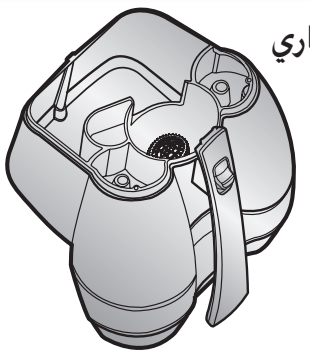

من الصعب تجنب التعرض للأتربة أثناء عملية تفريغ المكنسة الكهربية. ولتقليل من خطورة هذا الأمر، فضلاً ضع حاوية الأتربة فى كيسٍ كبير لتفريغها ثم أغلق الكيس غلقًا محكمًا حول الحاوية. قم بإخراج حاوية الأتربة بعد تفريغها ثم أغلق الكيس جيدًا وبسرعة وتخلص منه على الفور. علمًا بأنه يُنصح باستخدام قفازات واقية وقناع أثناء تفريغ محتويات المكنسة الكهربية. لا تطلب من شخص يعانى من الحساسية تفريغ حاوية الأتربةً إذا أمكن ذلك.

تنظيف حاوية الأتربة

مواعيد تنظيف حاوية الأتربة

- سوف يضيء المصباح باللون الأحمر عندما تقل عملية الشفط. لذا، يُرجى تنظيف حاوية الأتربة عندما يضيء المصباح.

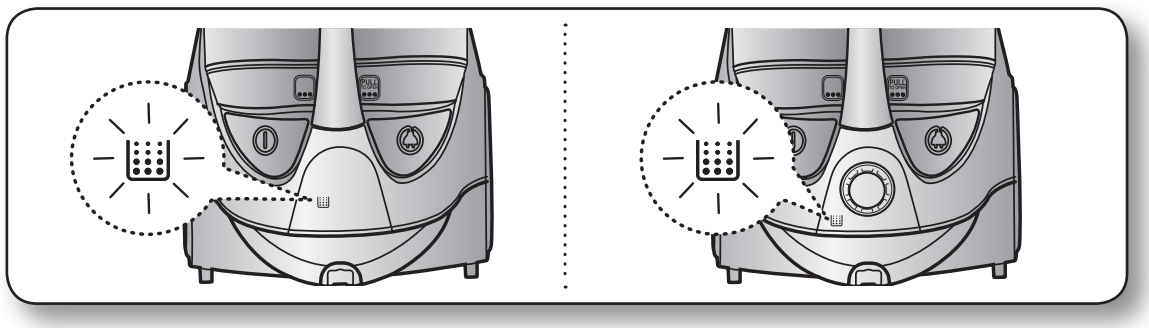

- قم بضبط طاقة المكنسة الكهربائية على MAX (الحد الأقصى).

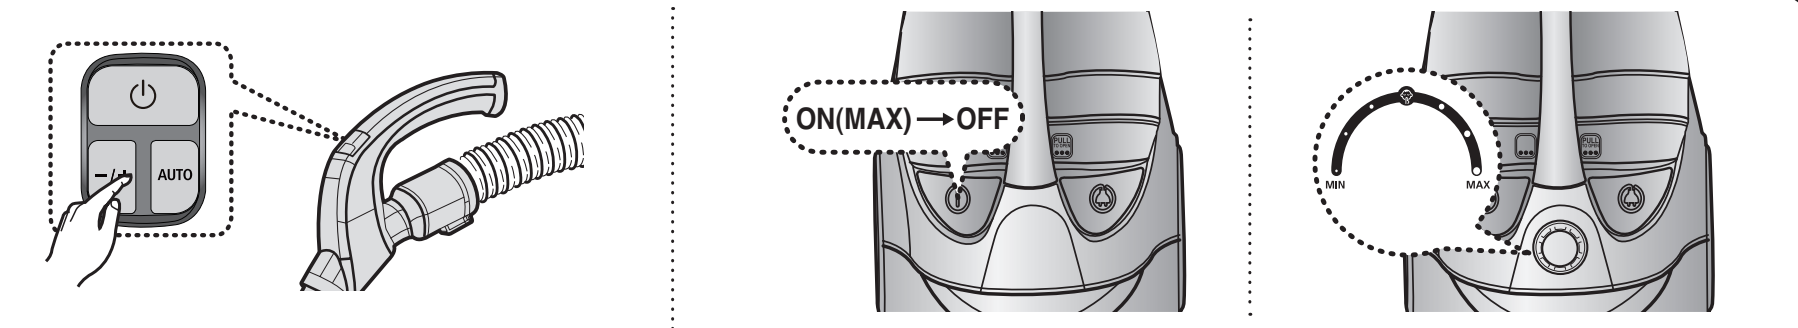

التحكم في الجسم

التحكم في المقبض

- إذا تحول مؤشر فحص المرشح إلى اللون الأحمر وكان المدخل على مسافة ١٠ سم من أرض مسطحة، قم بتنظيف حاوية الأتربة.

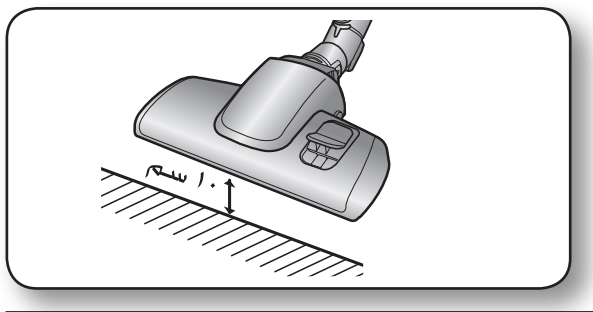

★ في حالة استمرار تناقص قوة الشفط بشكل ملحوظ، يُرجى تنظيف حاوية الأتربة.

الفرشاة الفائقة المزيدة لتنظيف الشعر (اختيارية)

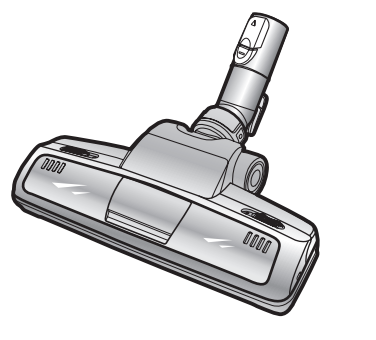

لإزالة شعر الحيوانات الأليفة والأنسجة الموجودة على السجاجيد بطريقة مميزة.

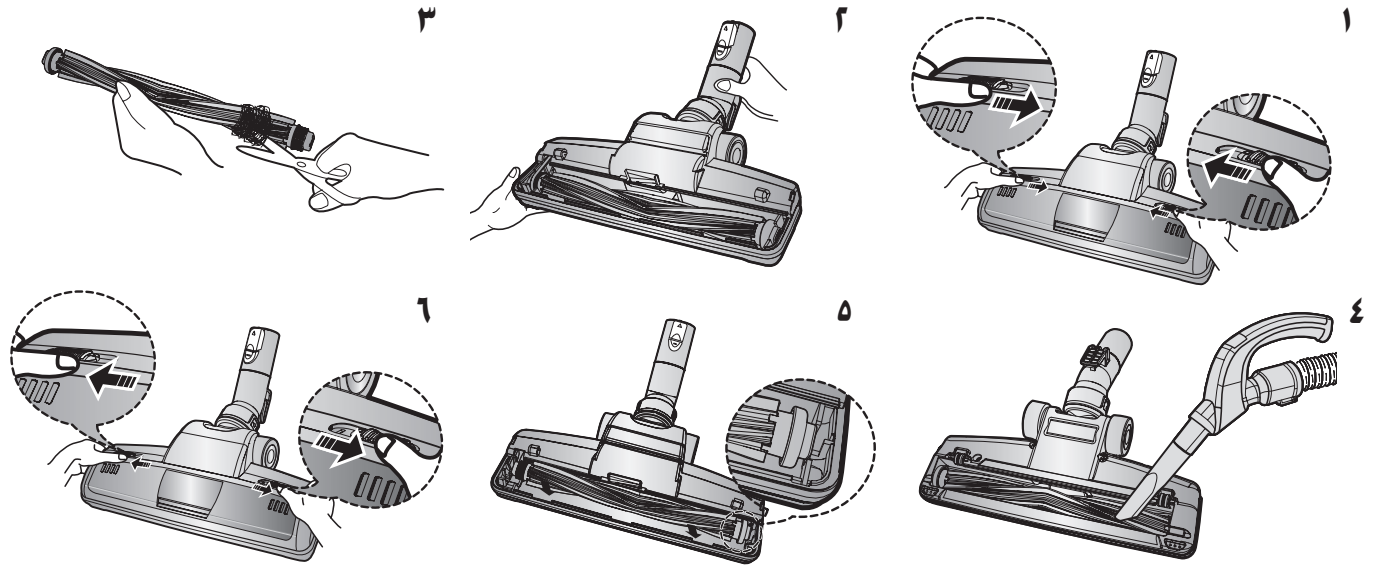

يؤدي استخدام المكنسة الكهربائية بشكل متكرر في إزالة الشعر أو فراء الحيوانات الأليفة إلى سقوط العجلة الدوارة نتيجة لحدوث تشابك حول الأسطوانة. في هذه الحالة، قم بتنظيف الأسطوانة بعناية.

١. قم بدفع زر الفتح لغطاء الشاشة الشفافة لإزالته.
٢. قم بإزالة شريط الفرشاة من الشاشة الشفافة.
٣. قم بإزالة أية مواد متبقية كالأتربة أو الشعر المتشابك حول شريط الفرشاة باستخدام المقص.
٤. قم بإزالة الأتربة من داخل تجويف الفرشاة باستخدام نافض الغبار أو أداة تنظيف ما بين الشقوق.
٥. قم بإدخال شريط الفرشاة في الحزام الدوار وتجميعه.
٦. ادفع الجزء الخلفي من غطاء الشاشة الشفافة إلى مكانه حتى يصدر صوت قرقعة لإعادة تجميعه.

تفريغ حاوية الأتربة

١

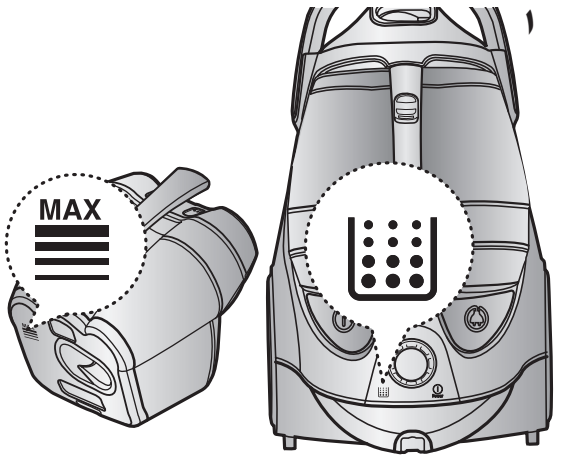

بمجرد وصول الأتربة إلى علامتها النهائية، قم بتفريغ حاوية الأتربة.

٢

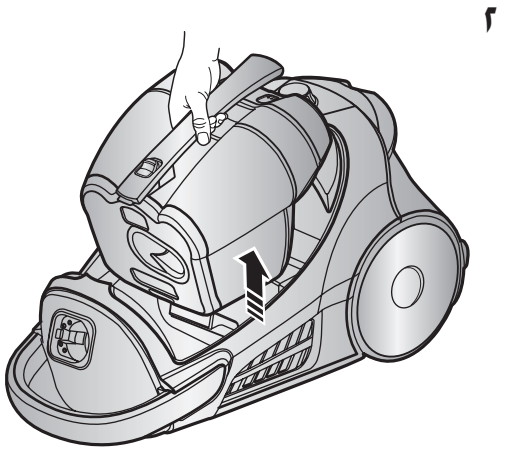

قم بإخراج حاوية الأتربة عن طريق جذب الزر.

٣

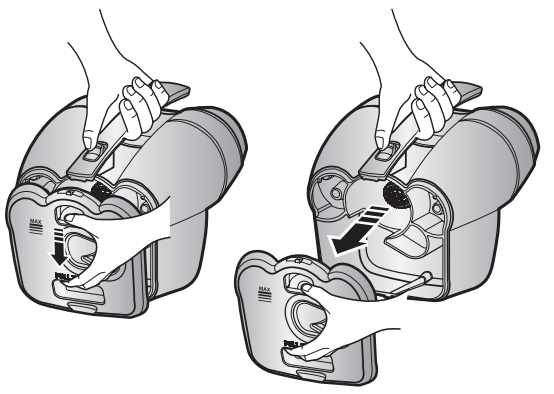

افتح غطاء حاوية الأتربة

٤

قم بتفريغ الأتربة من الحاوية.

٥

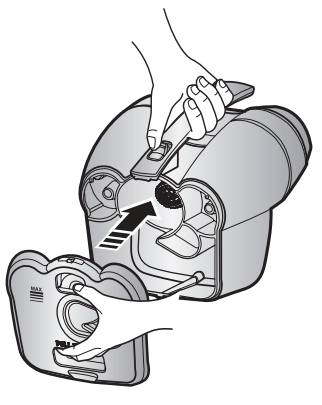

بعد الانتهاء من تفريغ حاوية الأتربة، قم بإزالة أية مواد عالقةٍ في غطاءها كالشعر والفراء، ثم أغلق غطاء حاوية الأتربة.

٦

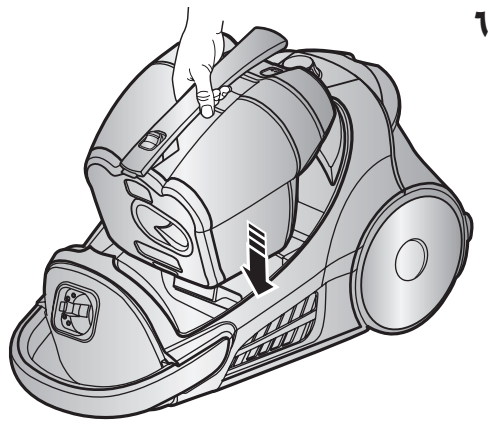

قبل الاستخدام، ادفع حاوية الأتربة داخل الجسم الرئيسي واضغط على غطاء الأتربة بالمكنسة الكهربائية حتى تسمع صوت "نقرة".

صيانة الأدوات والمرشح

فرشاة تنظيف الباركيه (اختيارية)

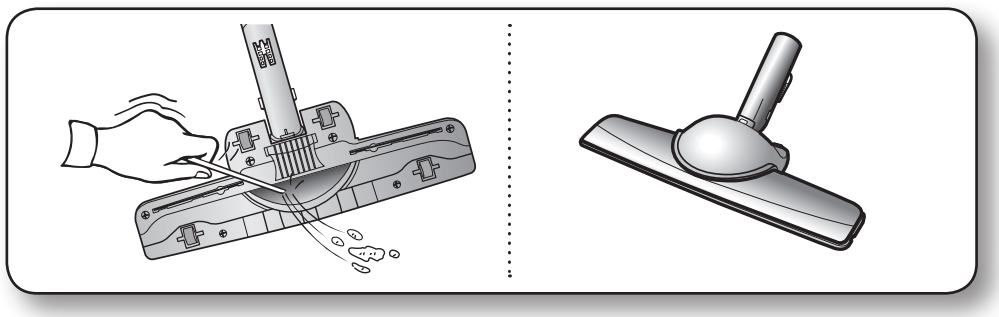

- شفط الأتربة في منطقة عريضة على الفور.
- إزالة أية مواد متبقية تمامًا إذا كان المدخل مسدودًا.

فرشاة تنظيف البطاطين (اختيارية)

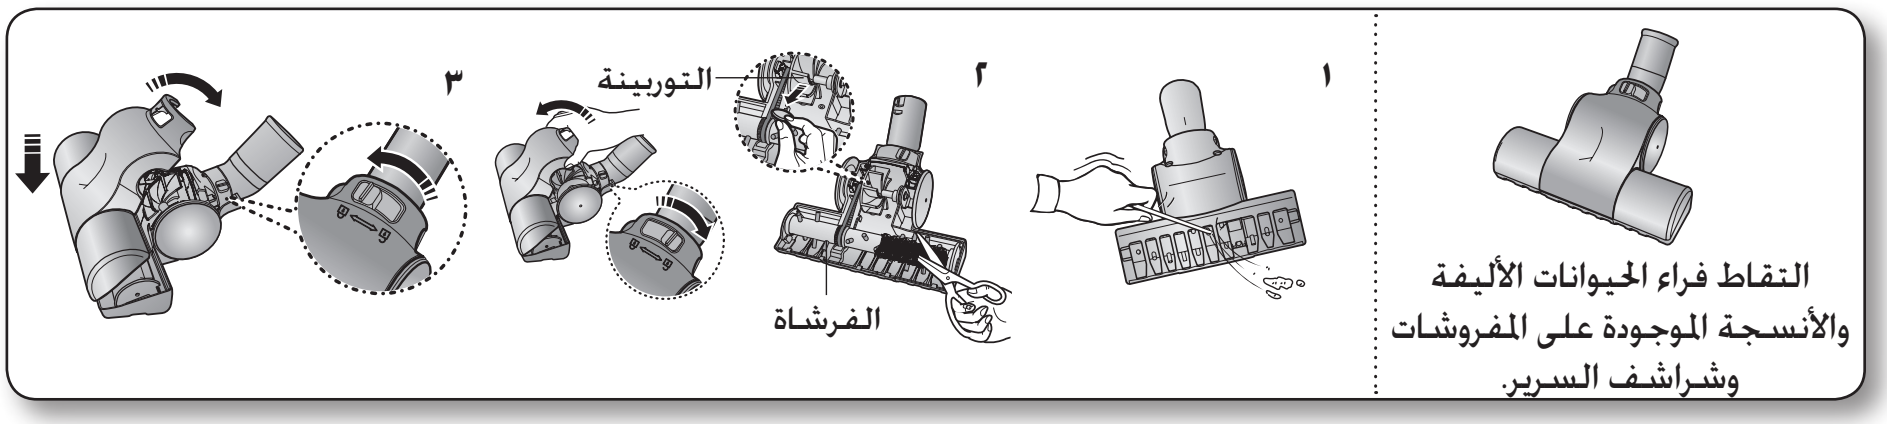

١. قم بإزالة أية مواد متبقية تمامًا إذا كان المدخل مسدودًا.

٢. أدر مفتاح القفل إلى (🔓) وتخلص من المواد المتبقية.

٣. لإعادة التجميع، قم بمحاذاة الغطاء مع الجزء الأمامي من الجسم الرئيسي ثم أغلقه. وبعد إغلاق الغطاء، تأكد من ضبط زر القفل على الموضع (🔒).

⚠ تنبيه — استخدام هذه الفرشاة للشراشف فقط، وتوخ الحذر حتى لا تتلف الفرشاة أثناء إزالة العوالق.

الفرشاة التوربينية الفائقة (اختيارية)

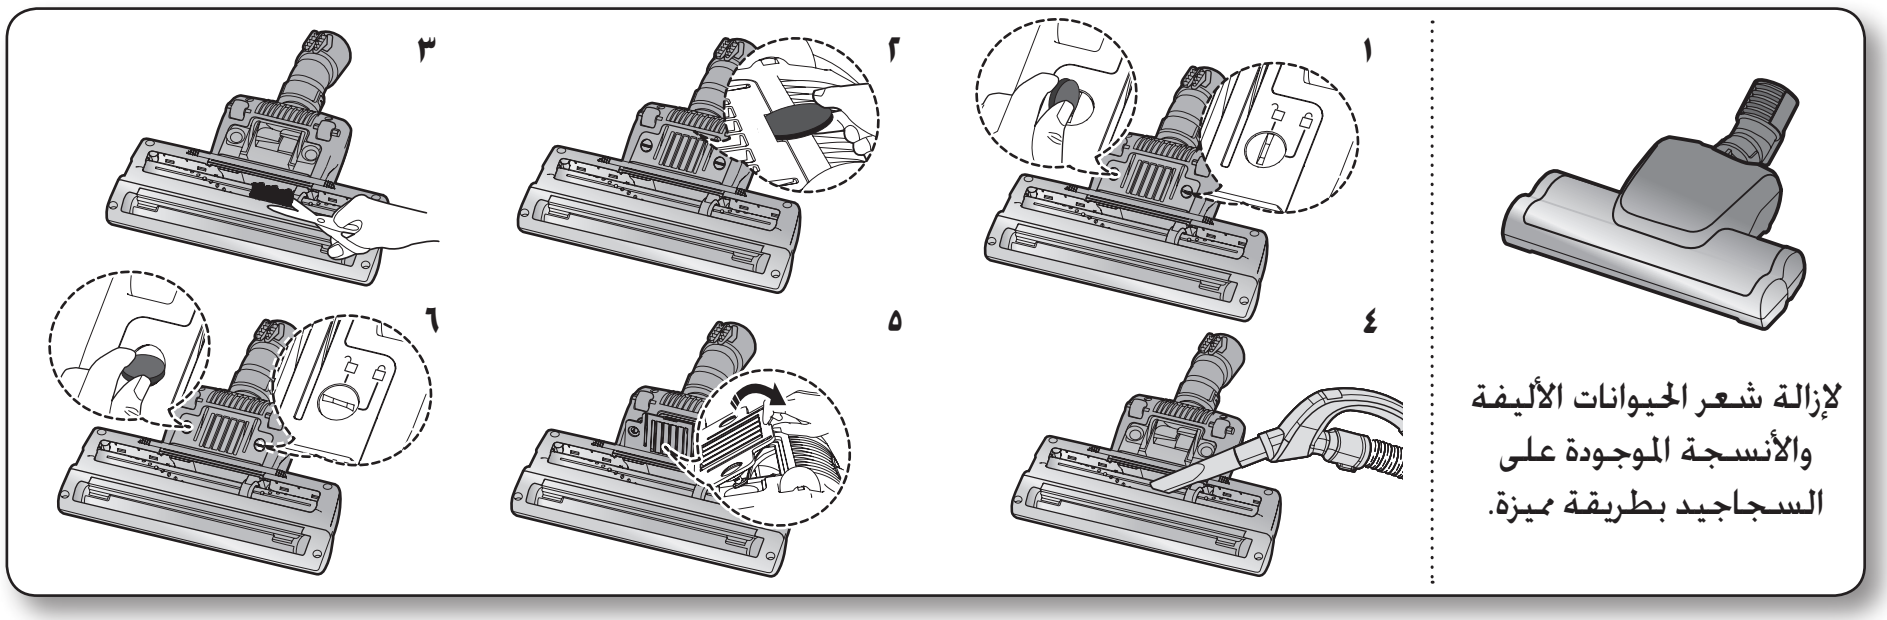

يؤدي استخدام المكنسة الكهربائية بشكل متكرر في إزالة الشعر أو فراء الحيوانات الأليفة إلى سقوط العجلة الدوارة نتيجة لحدوث تشابك حول الأسطوانة. في هذه الحالة، قم بتنظيف الأسطوانة بعناية.

١. قم بضبط زر القفل إلى وضع إلغاء القفل باستخدام ما يشبه العملة المعدنية (🔓).

٢. قم بإزالة موجّه الهواء باستخدام ما يشبه العملة المعدنية.

٣. قم بإزالة أية مواد متبقية كالأتربة أو الشعر المتشابك حول شريط الفرشاة باستخدام المقص.

٤. قم بإزالة الأتربة من داخل تجويف الفرشاة باستخدام نافض الغبار أو أداة تنظيف ما بين الشقوق.

٥. قم بتركيب موجّه الهواء.

٦. قم بضبط زر القفل إلى وضع القفل باستخدام ما يشبه العملة المعدنية (🔒).

⚠ تنبيه — الرجاء توخي الحذر حتى لا تتلف الفرشاة.

صيانة الأدوات والمرشح

صيانة أدوات الأرضية

أنبوب تمديد الذراع (اختيارى)

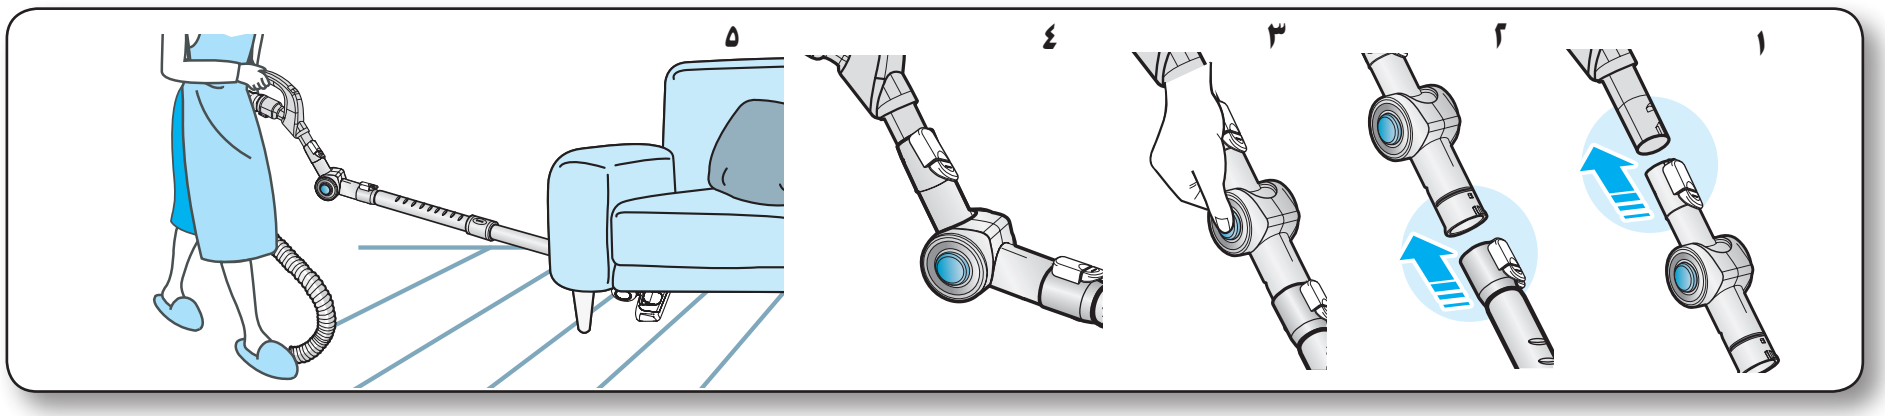

١. قم بتوصيل أنبوب تمديد الذراع بجزء التوصيل فى مقبض الخرطوم والأنبوب المتداخل.
٢. قم بتثبيت الأنبوب المتداخل بالجزء السفلى لأنبوب تمديد الذراع.
٣. اضغط على الزر PUSH (ادفع).
٤. يُطوى ذراع المكنسة بالضغط على الزر PUSH (ادفع).
٥. يُتيح لك استخدام أنبوب تمديد الذراع الوصول إلى الأماكن التى يصعب الوصول إليها (أسفل قطع الأثاث) دون الحاجة إلى الوقوف على الركبتين.

٣ الفرشاة السريعة (اختيارية)

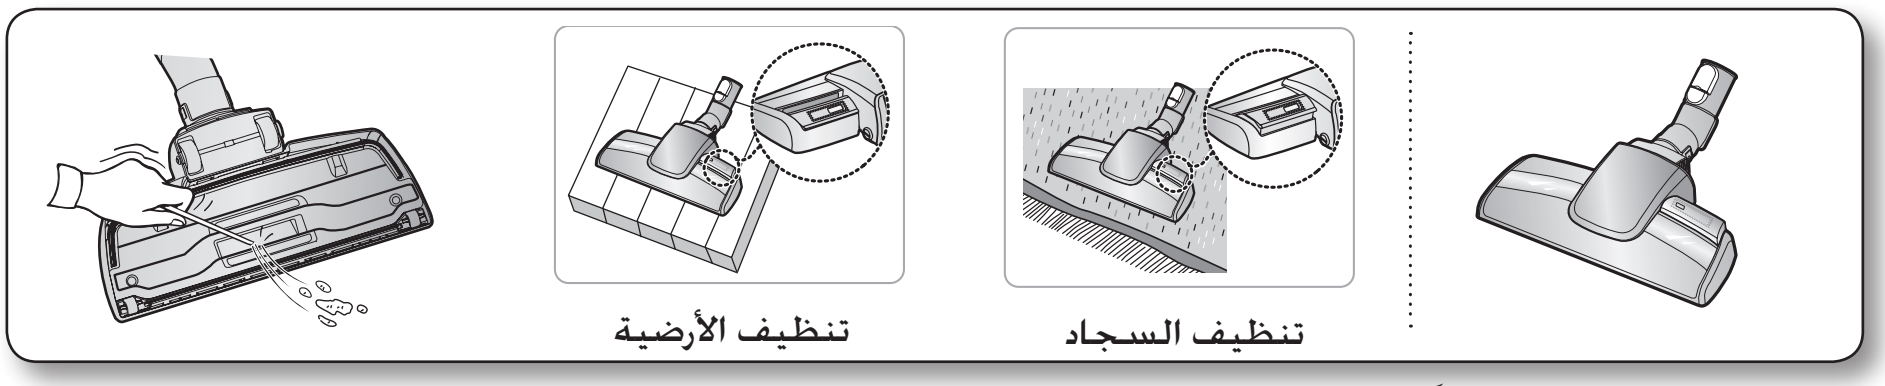

- قم بضبط ذراع المدخل وفقًا لسطح الأرضية.
- قم بإزالة أية مواد متبقية تمامًا إذا كان المدخل مسدودًا.

٢- الفرشاة الثابتة (اختيارية)

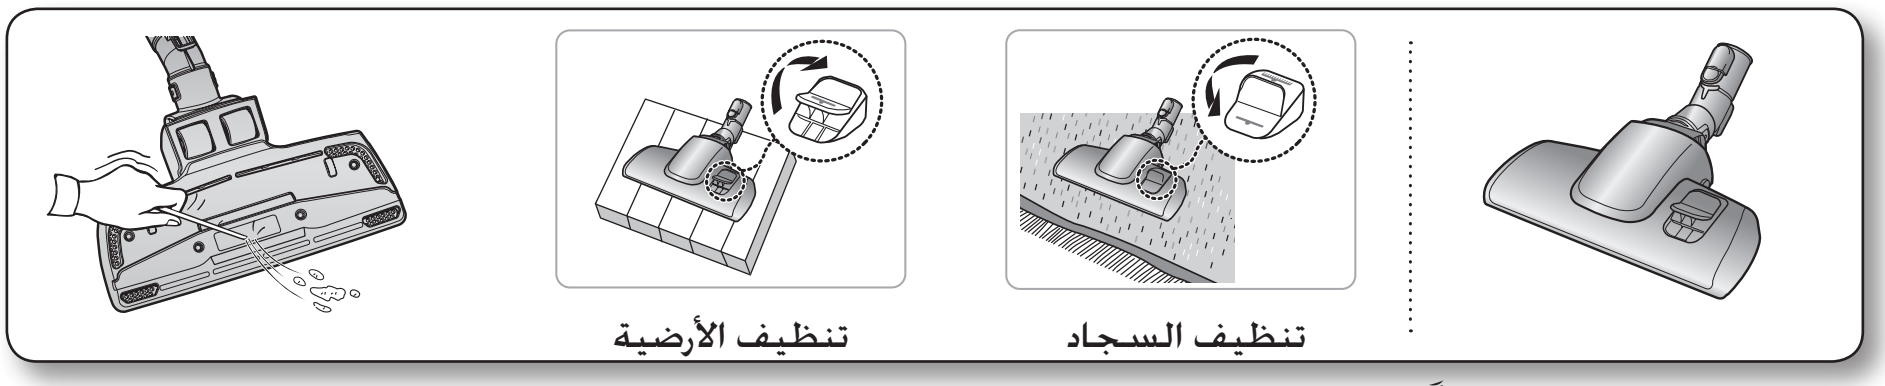

- قم بضبط ذراع المدخل وفقًا لسطح الأرضية.
- قم بإزالة أية مواد متبقية تمامًا إذا كان المدخل مسدودًا.

فرشاة الباركيه الرئيسية (اختيارية)

- شفط الأتربة في منطقة عريضة على الفور.
- إزالة أية مواد متبقية تمامًا إذا كان المدخل مسدودًا.

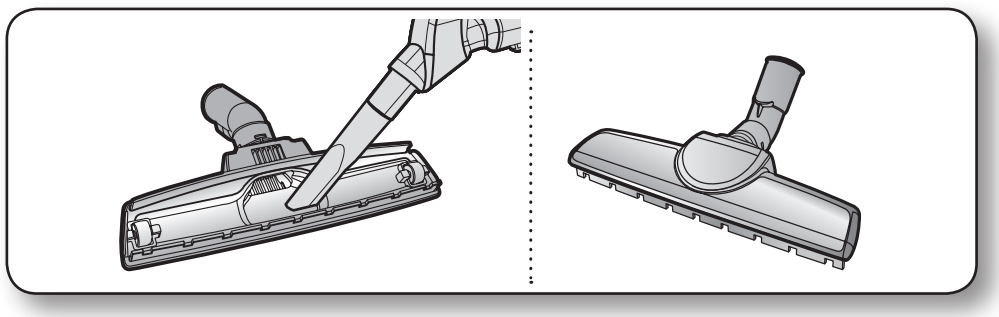

صيانة الأدوات والمرشح

استخدام الملحقات

الملحقات

• ادفع الملحق إلى نهاية مقبض الخرطوم.

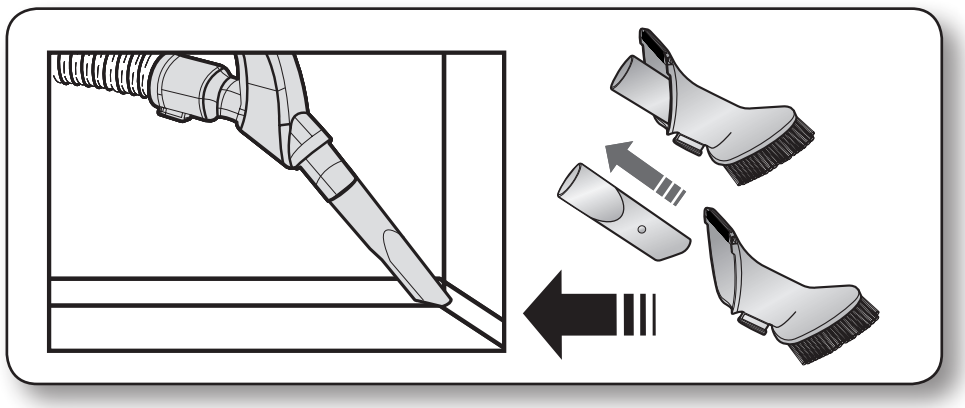

• لاستخدام أداة تنظيف الأتربة. ادفع الملحق إلى نهاية مقبض الخرطوم.

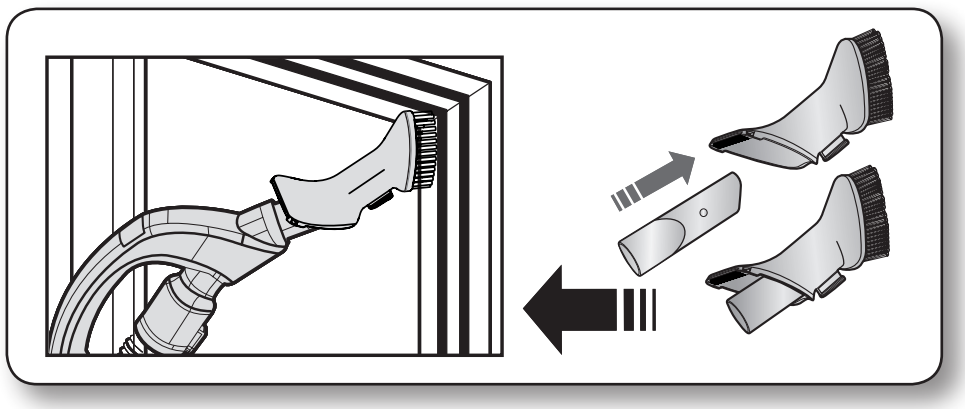

• لاستخدام أداة تنظيف المفروشات. ادفع الملحق إلى نهاية مقبض الخرطوم.

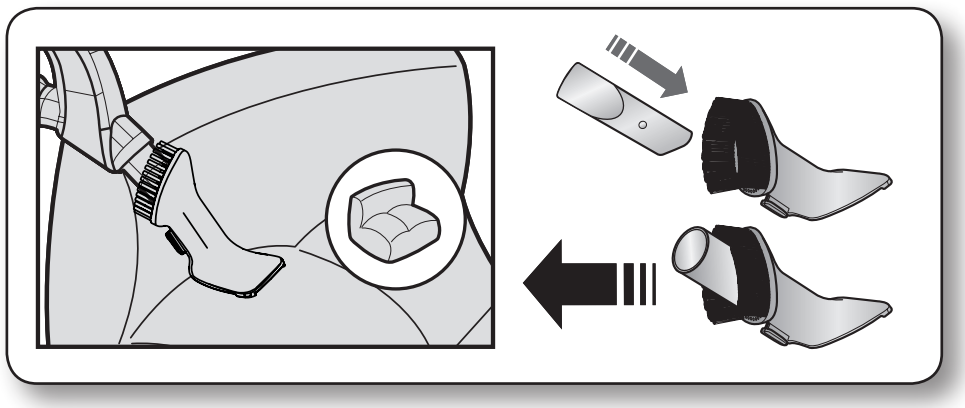

الأنبوب

• قم بضبط طول الأنبوب المتداخل بتحريك زر التحكم في الطول الموجود في منتصف الأنبوب المتداخل من الخلف والأمام.

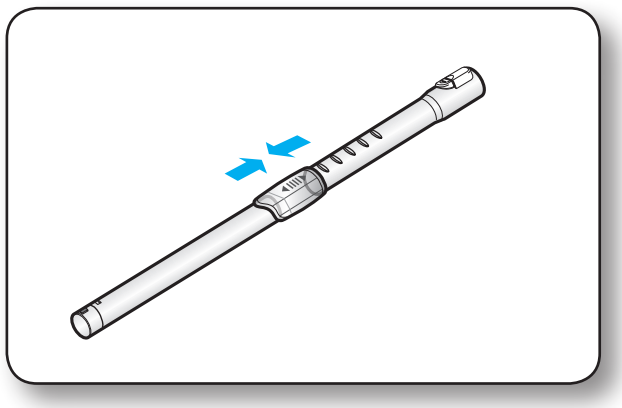

• لفحص الانسدادات. افصل الأنبوب المتداخل وقم بضبطه على طول قصير. وهذا بدوره يسمح ذلك بتنظيف المخلفات العالقة بالأنبوب.

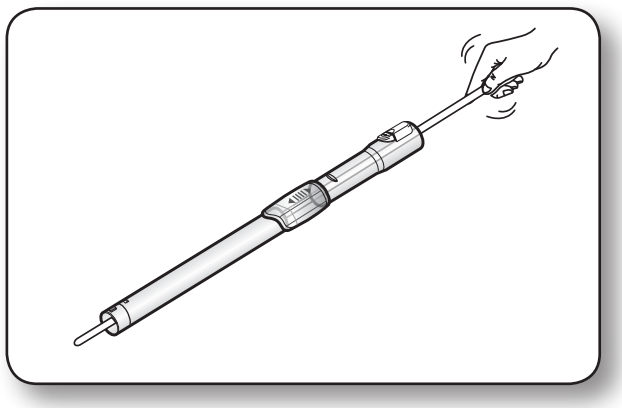

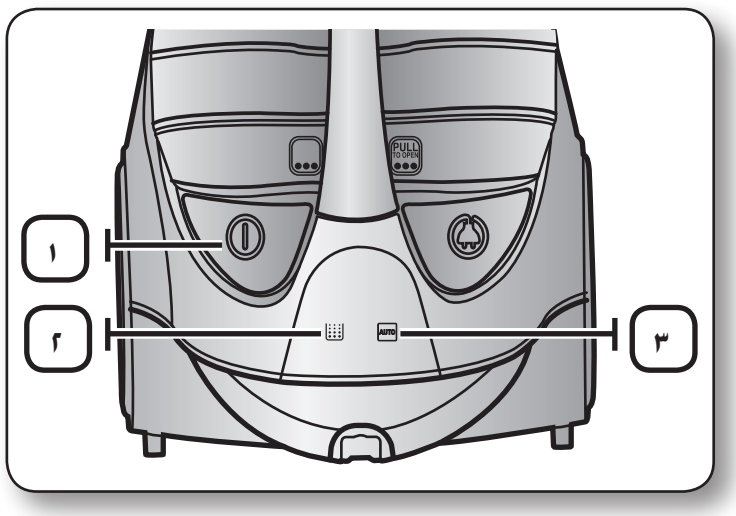

- **الجسم**

اضغط على "زر التشغيل/إيقاف التشغيل" مرة بعد مرة لبدء تشغيل المكنسة الكهربائية وإيقاف تشغيلها.

(إيقاف التشغيل ← تشغيل ← إيقاف التشغيل)

في حالة تعطل جهاز المقبض للتحكم عن بُعد، يمكن تشغيل المكنسة وإيقافها باستخدام زر "التشغيل / إيقاف التشغيل" الموجود على جسم المكنسة.

١		يعمل زر "التشغيل/إيقاف التشغيل" على تشغيل المكنسة الكهربائية أو إيقافها.
٢		يسطع ضوء المرشح عندما تتطلب حاوية الأتربة فحصًا أو تفريغًا. كما تصدر المكنسة إشارة صوتية.
٣	AUTO	يشير هذا الرمز إلى تحديد وضع الشفط التلقائي، حيث يظهر مستوى الشفط على شاشة العرض LED.

التحكم في جسم المكنسة

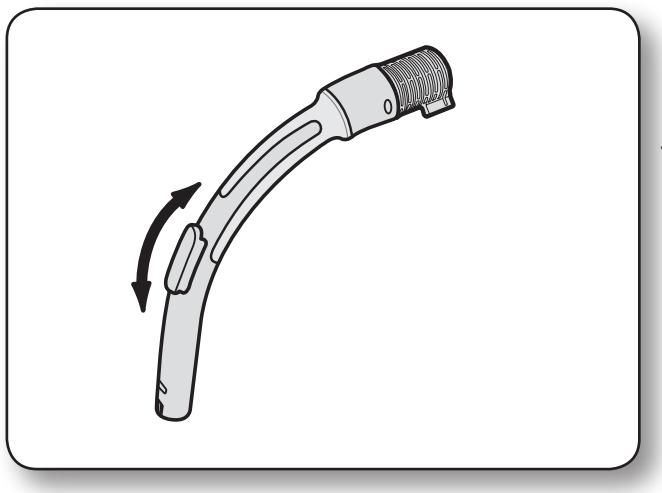

- **الخرطوم**

لتقليل قوة الشفط لتنظيف الستائر والسجاد الصغير والأقمشة الخفيفة الأخرى، اسحب هواء الصنبور حتى تظهر الفتحة.

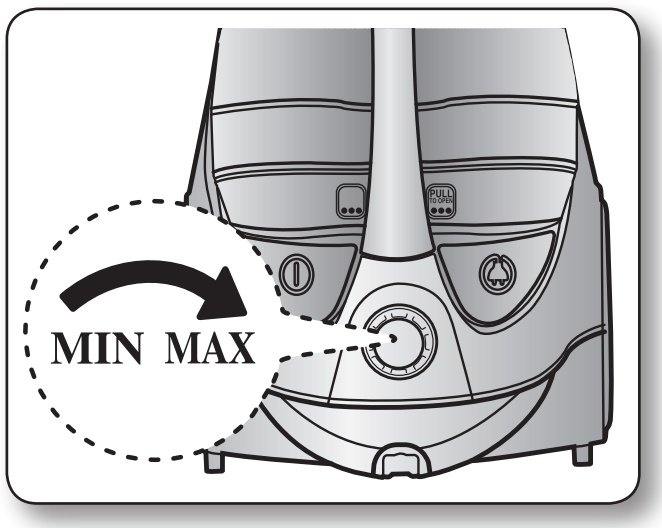

- **الجسم**

اضغط على زر "التشغيل / إيقاف التشغيل" بشكل متكرر لتشغيل المكنسة الكهربائية أو إيقافها.

(إيقاف التشغيل ← تشغيل ← إيقاف التشغيل)

للتحكم في مستوى الطاقة، قم بتحريك زر التحكم في الطاقة نحو اليمين واليسار.

MIN (**الحد الأدنى**) = للأسطح الناعمة كالستائر الشبكية.

MAX (**الحد الأقصى**) = للأرضيات الصلبة والسجاد شديد الاتساخ.

	يسطع ضوء المرشح عندما تتطلب حاوية الأتربة فحصًا أو تفريغًا. كما تصدر المكنسة إشارة صوتية.

تشغيل المكنسة

سلك التيار الكهربي

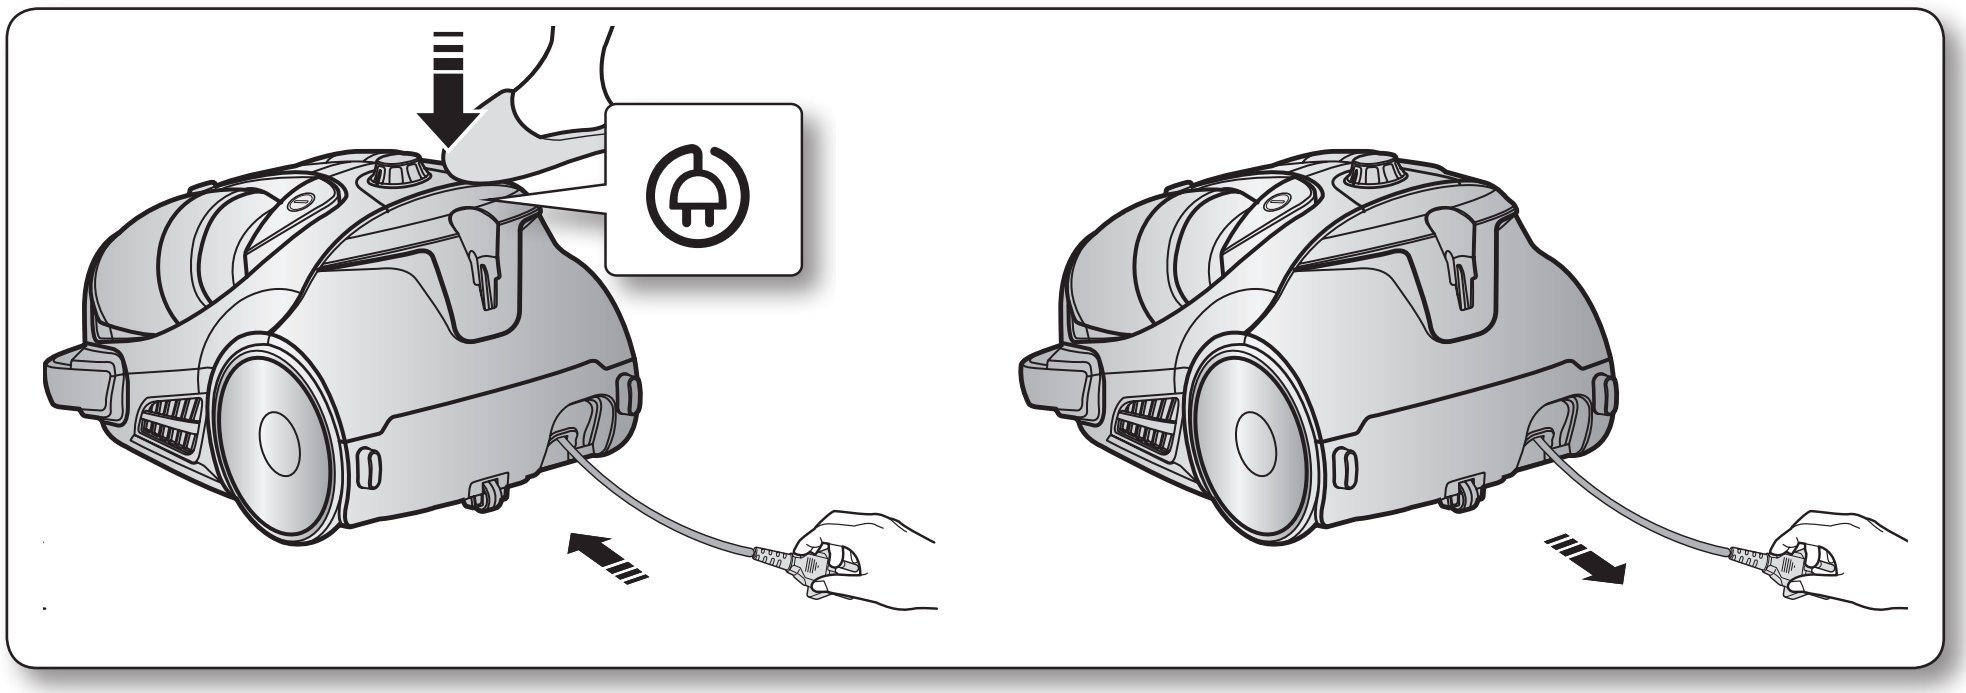

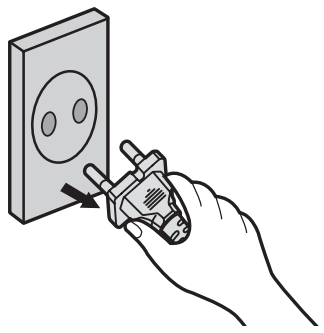

تنبيه

• عند فصل القابس من مأخذ التيار الكهربي، اسحب القابس وليس السلك.

التحكم في الطاقة (التحكم بالأشعة تحت الحمراء)

- الخرطوم

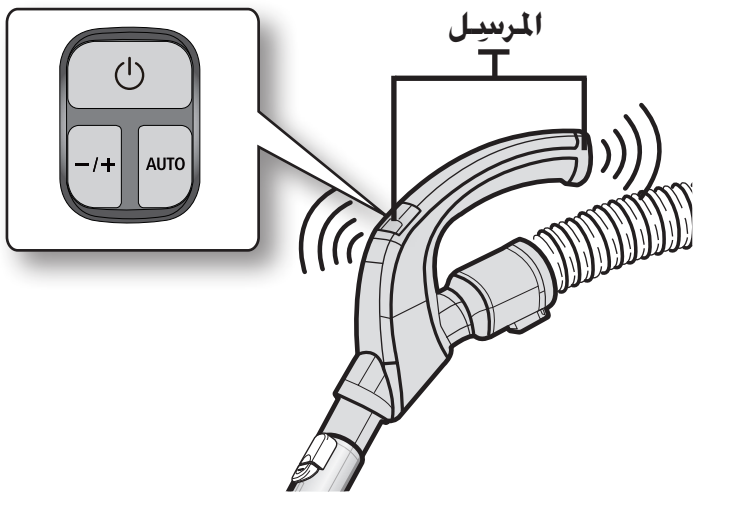

التحكم في المقبض
يتم التحكم بالمكنسة بواسطة إشارات الأشعة تحت الحمراء.

١. تشغيل/إيقاف تشغيل المكنسة الكهربائية (⏻)

اضغط على زر "تشغيل/إيقاف تشغيل" المكنسة الكهربائية لتشغيلها. اضغط مرة أخرى لإيقاف تشغيل المكنسة الكهربائية.

٢. المكنسة الكهربائية (+ و -)

اضغط على الزر MODE (الوضع) بشكل متكرر لاختيار الوضع المناسب.

ON (تشغيل)) MIN (الحد الأدنى) ← SILENT (صامت) ← MAX (الحد الأقصى)

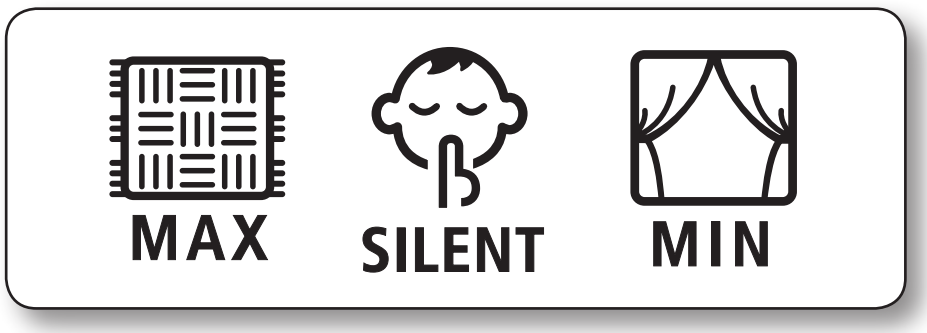

٣. استخدام الوضع Auto (تلقائي)

اضغط على الزر Auto (تلقائي) لتشغيل المكنسة تلقائيًا.

★ لا تغطِ مرسِل المقبض عندما تستخدم زر التحكم في المقبض.

تجميع المكنسة

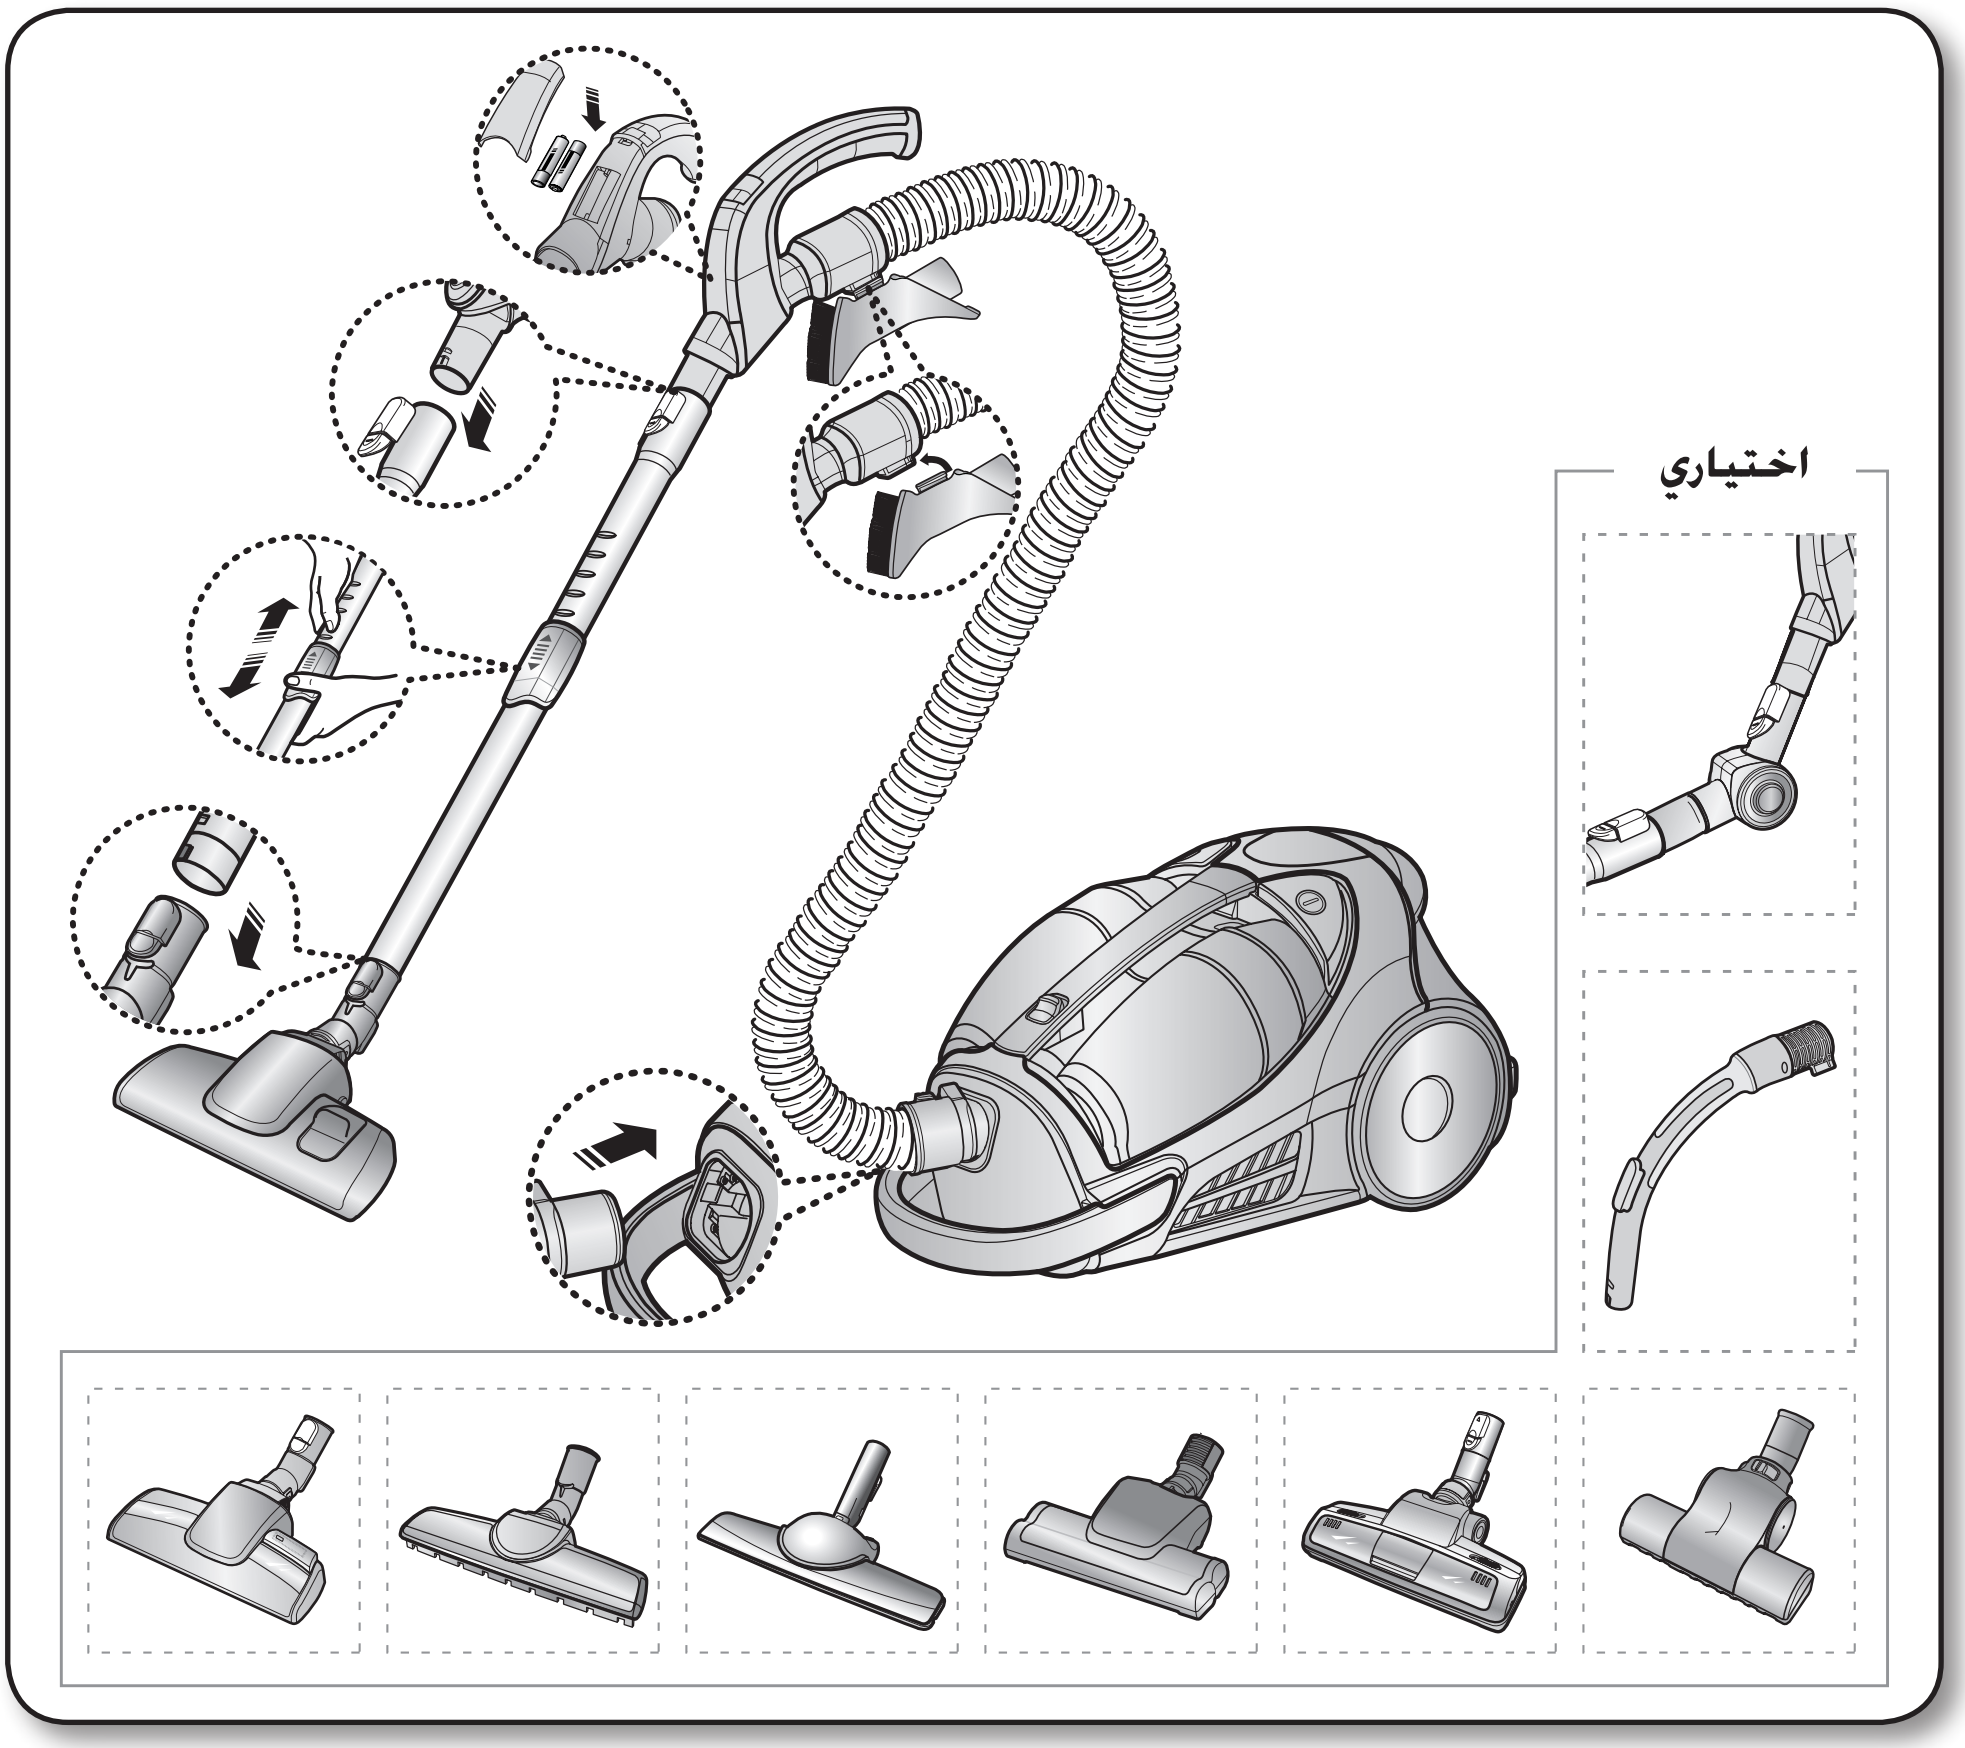

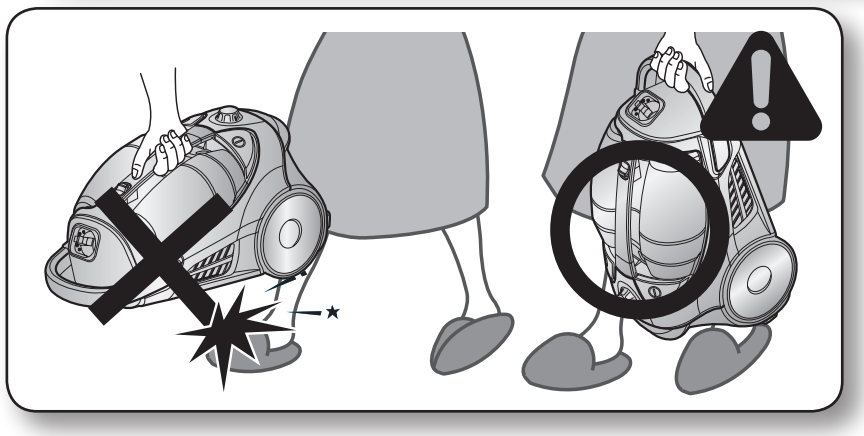

- لا تضغط على زر مقبض حاوية الأتربة أثناء حمل المكنسة.

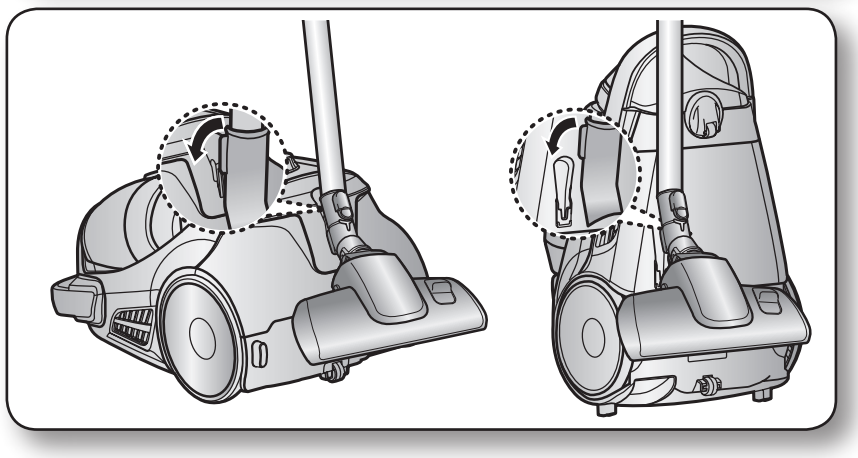

- لتخزين المكنسة، قم بتثبيت خرطوم الأرضية.

المحتويات

تجميع المكنسة
٠٥

٠٥ تجميع المكنسة

تشغيل المكنسة
٠٦

٠٦ سلك التيار الكهربي
٠٦ التحكم في الطاقة
٠٧ التحكم فى جسم المكنسة

صيانة الأدوات والمرشح
٠٨

٠٨ استخدام الملحقات
٠٩ صيانة أدوات الأرضية
١١ تفريغ حاوية الأتربة
١٢ تنظيف كيس الأتربة
١٤ تنظيف مخرج المرشح
١٤ تغيير البطارية (اختياري)

استكشاف الأخطاء وإصلاحها
١٥

معلومات السلامة

احتياطات السلامة الهامة

١. اقرأ جميع الإرشادات بعناية. قبل الشروع في التشغيل، تأكد من أن الجهد الكهربي لمصدر الكهرباء هو نفسه الموضح على لوحة التقدير الموجودة بالجزء السفلي من المكنسة.

٢. **تحذير**: لا تستخدم المكنسة الكهربائية عندما تكون السجادة أو الأرضية مبتلة.
تجنب استخدامها لشفط المياه.

٣. يُعد الإشراف الوثيق أمرًا ضروريًا عندما يُستخدم أي جهاز من قِبل الأطفال أو بالقرب منهم. لا تسمح باستخدام المكنسة الكهربائية كلعبة. لا تسمح بتشغيل مكنسة الكهربائية دون مراقبة في أي وقت من الأوقات. استخدم المكنسة الكهربائية للغرض المخصص لها فقط كما هو موضح في هذه الإرشادات.

٤. لا تستخدم المكنسة الكهربائية دون حاوية للأتربة. وقم بتفريغ الحاوية قبل امتلائها للحفاظ على كفاءة المكنسة الكهربائية.

٥. لا تستخدم المكنسة الكهربائية لالتقاط أعواد الثقاب أو الرماد الساخن أو أعقاب السجائر. وحافظ عليها بعيدًا عن المواقد ومصادر الحرارة الأخرى، فقد تتسبب الحرارة في تلف الأجزاء البلاستيكية للوحدة وتغير ألوانها.

٦. تجنب التقاط أجسام صلبة وحادة بالمكنسة، فقد تتسبب في تلف أجزاء المكنسة. ولا تقف على الخرطوم. ولا تضع جسمًا ثقيلاً فوقه. لا تقم بسد منفذ الشفط أو الطرد.

٧. أوقف تشغيل المكنسة الكهربائية من المفتاح الموجود بالجهاز قبل فصل القابس من مأخذ التيار الكهربي. انزع القابس من مأخذ التيار الكهربي قبل تفريغ حاوية الأتربة. ولتجنب حدوث تلف، الرجاء فصل القابس بجذبه وليس بسحب السلك.

٨. لم يتم تصميم هذا الجهاز ليستخدمه أشخاص (بما في ذلك الأطفال) من ذوي القدرات البدنية أو الحسية أو العقلية المحدودة أو غير الملمين بالخبرة والمعرفة المطلوبة إلا إذا تم ذلك تحت إشراف أو توجيه شخص مسئول عن الحفاظ على سلامتهم.

٩. ينبغي مراقبة الأطفال للتأكد من عدم عبثهم بالجهاز.

١٠. يجب فصل القابس من مأخذ التيار الكهربي قبل تنظيف الجهاز أو صيانته.

١١. لا يوصى باستخدام سلك توصيل.

١٢. إذا لم تعمل المكنسة على نحو سليم، قم بإيقاف تشغيل مورّد الطاقة واستشر وكيل الصيانة المعتمد.

١٣. في حالة تلف سلك التيار، يجب استبداله من قِبل الشركة المصنّعة أو وكيل الصيانة التابع لها أو أي فني صيانة مؤهل لتفادي التعرض لأي خطر.

١٤. لا تحمل المكنسة الكهربائية عن طريق الإمساك بالخرطوم.
واستخدم المقبض الموجود بجهاز المكنسة الكهربائية.

١٥. افصل قابس المكنسة الكهربائية في حالة عدم استخدامها. أوقف تشغيل مفتاح الطاقة قبل فصل القابس.

معلومات السلامة

معلومات السلامة

تحذير • قبل تشغيل الجهاز، يُرجى قراءة هذا الدليل بعناية والاحتفاظ به للرجوع إليه فيما بعد.

تحذير • نظراً لأن إرشادات التشغيل التالية تغطي طرزًا متنوعة، فقد تختلف خصائص المكنسة الكهربائية التي اشتريتها اختلافًا طفيفًا عما هو موضح في هذا الدليل.

رموز التنبيهات / التحذيرات المستخدمة

تحذير	**يشير إلى وجود خطر قد يؤدي إلى حدوث وفاة أو إصابة خطيرة.**
تنبيه	**يشير إلى وجود خطر حدوث إصابة شخصية أو تلف مادي.**

الرموز الأخرى المستخدمة

⃠	**يشير إلى شيء يجب "ألا" تفعله.**
★	**يشير إلى شيء يجب اتباعه.**
🔌	**يشير إلى أنه يجب عليك فصل قابس التيار الكهربي من المقبس.**

تحذير هذه المكنسة الكهربائية مصممة للاستخدام في الأغراض المنزلية فقط. لا تستخدم هذه المكنسة الكهربائية في تنظيف مخلفات البناء أو حطامه. وتجنب استخدام هذه المكنسة الكهربائية في حالة إزالة أي من المرشحات، حيث إن ذلك قد يتسبب في حدوث تلف للمكونات الداخلية وإلغاء الضمان.

سلسلة SC9600

المكنسة الكهربائية
دليل المستخدم

Planet First 100% Recycled Paper

تمت طباعة هذا الدليل على ورق معاد تدويره بنسبة ١٠٠٪.

العربية

* قبل الشروع في تشغيل هذه الوحدة، الرجاء قراءة الإرشادات بعناية.
* للاستخدام الداخلي فقط.

إمكانات هائلة

شكرًا لشرائك أحد منتجات Samsung.
للحصول على خدمة أكثر تكاملاً،
الرجاء تسجيل المنتج الخاص بك على الموقع
www.samsung.com/register

SAMSUNG

Code No. DJ68-00621E REV(0.0)